Muse NAS-RAID 4bay Network Access Server

Reliable SOHO & Home Network Storage solution - application for 3.5" SATA HDD

P/N:N0001LN

User Manual

Thermaltake
COOLall YOUR LIFE

TRADEMARKS
All brand and product names are trademarks or registered trademarks of their respective companies.

NOTE
The information in this manual is subject to change without notice.

Safety Information

- **WARNING:** Before connecting to power, set the Voltage Switch on the rear of your system to the voltage matching your area – voltage rating 100~120 / 200~240 Vac.
- Maximum operating ambient temperature 40 ^{o}C degree
- **CAUTION:** Turn off the system before removing the cabinet cover.
- **CAUTION on using the RTC battery:** Danger of explosion if battery is incorrectly placed. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Table of Contents

Safety Information i

1 **Introduction 1**

1.1 Package Contents 2
1.2 Specifications 2
Hardware 2
Software 3
1.3 System View 4
Front Components 4
Front Components (Compartment Door Open) 6
Right-Side Components 7
Rear Components 8

2 **Setting Up 9**

Step 1. Install the Hard Disks 9
Step 2. Connect to the Network 12
Step 3. Connect to Power 12
Step 4. Configure Your Storage System 13

3 **Configuring Your Storage System 15**

3.1 Installing the Storage System Console 16
3.2 Initializing the Hard Disk(s) 20
3.3 Starting Web Management 34
3.4 System Management 36
Users Page 36
Shared Folders Page 42
Backups Page (Optional) 45
Advanced Page 47
3.5 Logging Out of Web Management 62

4 **Disk Configurations 65**

4.1 Adding hard disks 68
Adding Hard Disks to a Linear or Normal RAID Configuration 69
Adding Hard Disks to a Degraded RAID Configuration 72
Removing Hard Disks or Responding to Disk Failure 73
Responding to RAID Degradation 74
Responding to RAID Failure 75

Swapping Hard Disks 76
Transferring Hard Disks to a New Storage System 76

Chapter 1 Introduction

Your MNAS is a storage solution for small offices and home network environments. With its high-speed networked storage, network users can easily access and share music, pictures, and real-time video files. Also, it has a program for discovering the storage system automatic assigned IP address. The **Backup** program provides superior data protection, allowing you to back up and restore system and data files.

Your storage system can accommodate up to four hard disks with standard RAID 0, 1, 5, 5+spare, 10, and Linear configurations, providing up to 1.6 TB (terabytes) of shared network storage. Supporting industry-standard protocols, you can easily add it to your existing network. In addition, network management and security is greatly simplified through the Web-based User Interface (UI).

Additional features include:

- A single administrative account.
- Support for dynamically increasing logical drive size. For example, if two hard disks are in use as a logical drive, a third hard disk can be added and you can increase the size of the logical drive configuration to include the third drive without destroying any existing data.
- User-defined partition and drive names.
- CIFS and NFS file system support.
- HTML-based configuration utility with username/password login security.
- Support for 64 User and 16 Group level accounts.
- User and Group level security settings (No Access, Read Only, Read/Write)
- Folder level security settings (sub-folders inherit security settings from parent folder).
- Private directories for personal accounts.
- Up to 32 folder/drive shares (no quota management).
- Built-in backup utility with one client license (and ability to activate additional licenses) – optional.

- Built-in FTP server with private directory support. Anonymous logins access a public folder; user accounts access their private directory and the public folder.

1.1 Package Contents

Includes the following:

- MNAS Storage System
- Power Cord
- RJ-45 Ethernet Cable
- Installation CD

1.2 Specifications

NOTE: Specifications are subject to change without notice.

Hardware

Cabinet Form Factor
Small Tower

Processor
Intel® IOP 80219 400 MHz

System Memory
256 MB of DDR SDRAM (up to 512 MB)

Flash Memory
8 MB

Hard Disk Drive Bay/Type
Up to four 3.5-inch SATA (Serial ATA)

Storage Capacity
Using 500 GB drives provides up to 2 TB

Network
Intel® 10/100/1000 Mbps Fast Ethernet RJ-45 GbE connector

Power Supply
100~120/200~240 Vac 50/60 Hz 128 W

Environment

- Operating temperature:
  0 ^{0}C (32 ^{0}F) to 40 ^{0}C (104 ^{0}F)
- Operating relative humidity:
  20 % to 85 % non-condensing
- Storage temperature:
  –20 ^{0}C (–4 ^{0}F) to 70 ^{0}C (158 ^{0}F)
- Storage relative humidity:
  5 % to 95 % non-condensing

Software

Network Client Support
- Microsoft Windows
- Linux
- UNIX

Network Protocol
- TCP/IP
- CIFS/NFS
- HTTP
- FTP

Support Industry Standards
DHCP

Hardware Monitor
Temperature Sensor

Disk Configuration
Linear, RAID 0/1/5/5+spare/10

Application for NAS Management
- Data Sharing, Protection
- System (OS) and Data Backup (optional)
- Web User Interface

Others
- English / Simplified Chinese (multiple language – option) support
- Real Time Clock (RTC)
- Programmable System Clock
- Hardware/Software Power Off
- Reset Button to return to factory default setting
- Firmware upgradeable
- Event Logs and Email Alerts

1.3 System View

Front Components

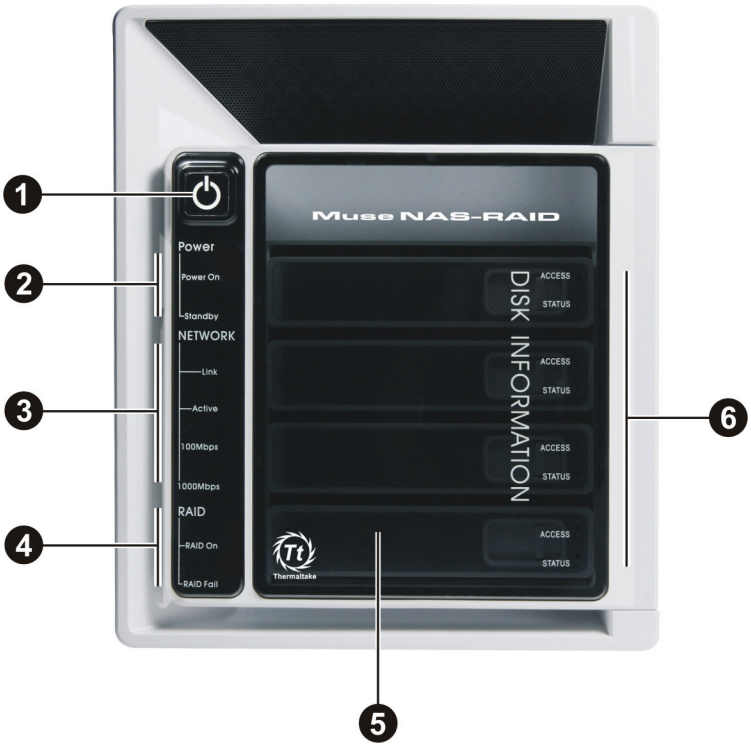

Ref	Component		Description
❶	**Power Button**		Turns the power on and off (soft-off).
❷	**Power Indicator**		Shows the current power status.
		Power On	Glows blue when the power is on.
		Standby	Glows red when the system is in Standby mode.

Ref	Component		Description
❸	**Network Indicator**		Shows the current network status.
		Link	Glows green when system is connected to the network.
		Active	Blinks green to indicate system is trying to establish a network connection.
		100 Mbps	Glows green to indicate a network connection speed at 100 Mbps.
		1000 Mbps	Glows blue to indicate a network connection speed at 1000 Mbps (Giga LAN).
❹	**RAID Indicator**		Shows the current RAID status.
		RAID On	Glows blue to indicate RAID function is implemented.
		RAID Fail	Glows red to indicate RAID function is inactive or malfunctioning.
❺	**Hard Disk Drive Compartment**		Inside are four hard disk trays.
❻	**Disk Information Indicator**		Shows the current hard disk drive status.
		Access	Blinks green to indicate hard disk drive read/write function.
		Status	Glows blue to indicate hard disk drive is workable.

Front Components (Compartment Door Open)

Ref	Component	Description
1	**Hard Disk Tray Door Handle**	Opens the hard disk tray.

Right-Side Components

Ref	Component	Description
1	**Door Lock**	Locks the hard disk drive compartment door for security.

Rear Components

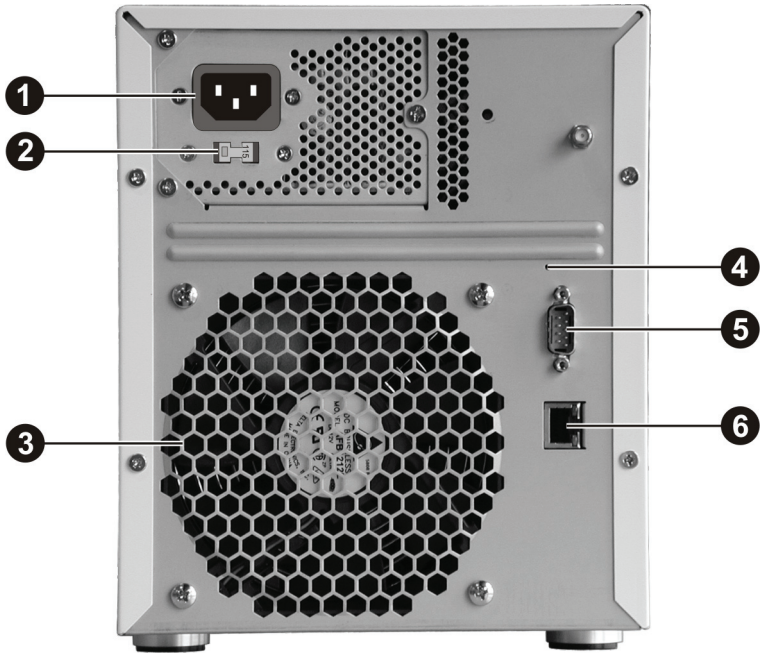

Ref	Component	Description
❶	**Power Connector**	Connects the power cord.
❷	**Voltage Switch**	Select the voltage matching your area.
❸	**Ventilation Opening**	Maintain proper operating temperature. Do not cover or block the openings.
❹	**Reset Button**	Allows you to reset the system to the factory default username, password, and IP.
❺	**RS-232 Port**	For manufacturer use only.
❻	**RJ-45 Connector**	Connects the LAN cable.

Chapter 2 Setting Up

Step 1. Install the Hard Disks

1. Insert the key and turn clockwise to unlock and open the door.

2. Slide the latch toward the right to release the handle.

NOTE: Install the first hard disk on the lowest level tray, the second hard disk on the second lowest level tray, and so forth.

3. Pull the handle to slide the hard disk tray forward. Then pull the hard disk tray out of the device.

4. Unfasten two screws from each side of the hard disk tray and remove the metal bracket.

5. Fit the hard disk into the tray with the connectors pointing toward the rear. Then align and fasten four screws to secure the hard disk in place.

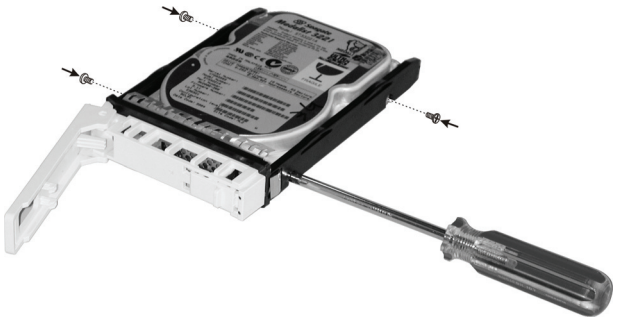

6. Keeping the handle in its full-open state, slide the hard disk tray all the way into the device until the hinge of the handle is inside the device. Then, close the handle. The latch should click into place.

7. Follow the same procedure for installing other hard disk(s) in the other compartment(s).

Step 2. Connect to the Network

Connect one end of the Ethernet cable to the network connector on the back of your storage system and the other end to a switch or router.

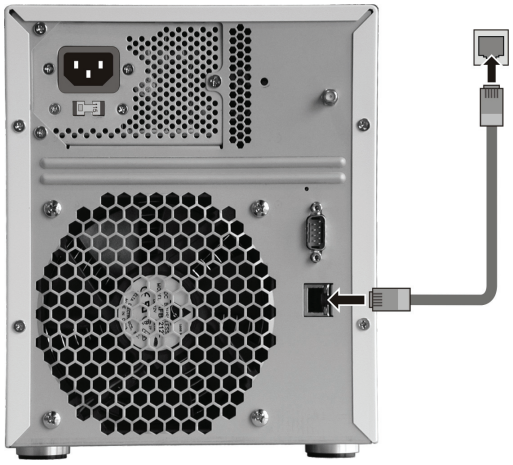

Step 3. Connect to Power

1. Before connecting to power, set the Voltage Switch to the voltage matching your area.

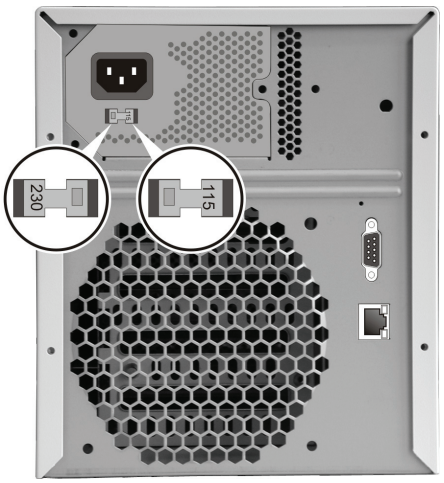

2. Connect one end of the power cord to your storage system and the other end to a standard electrical outlet.

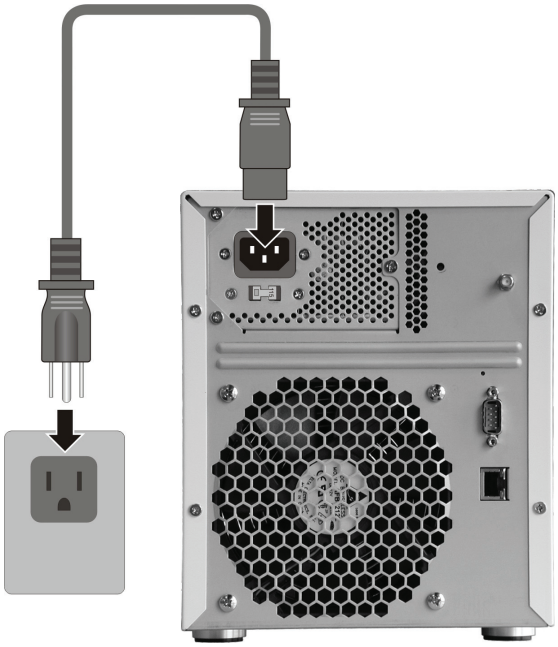

3. To turn on your storage system, press the Power button.

Step 4. Configure Your Storage System

See the next chapter for the software configuration instructions.

Chapter 3 Configuring Your Storage System

Inside the included CD in your package are three main folders namely:

- **`StorageSystemConsole`**
- **`FW_Upgrade`**
- **`UserManual`**

You must install at least one hard disk (lowest level tray) before your storage system can provide services.

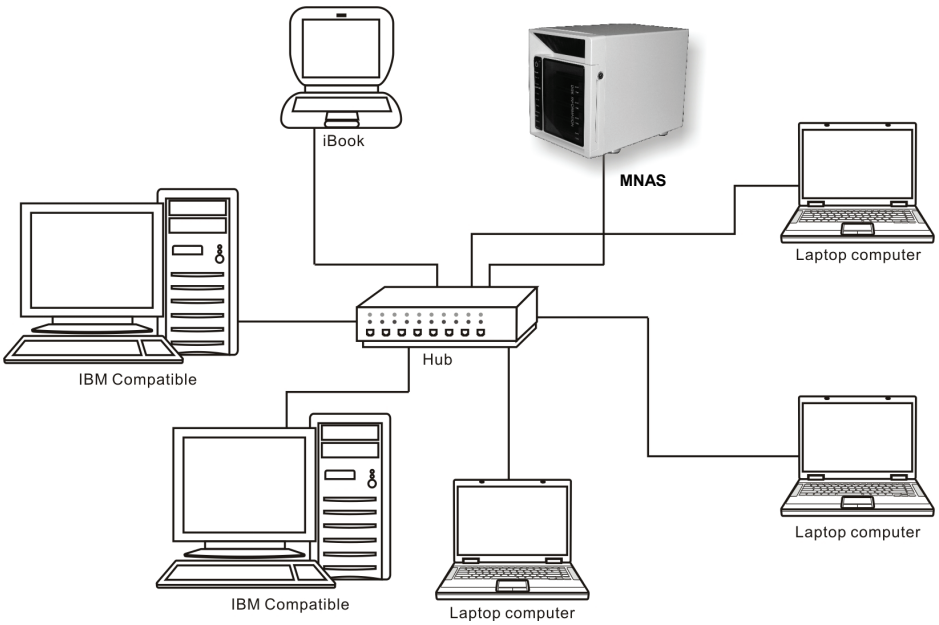

A MNAS network consists of a MNAS server and several clients connected via network links.

3.1 Installing the Storage System Console

You need to install the **Storage System Console** before you can perform any system configurations.

1. Install the **Storage System Console** on your computer by double-clicking on **`Setup.exe`** under the **`StorageSystemConsole`** folder of your included CD. The following screen appears. Click on **Next** to continue.

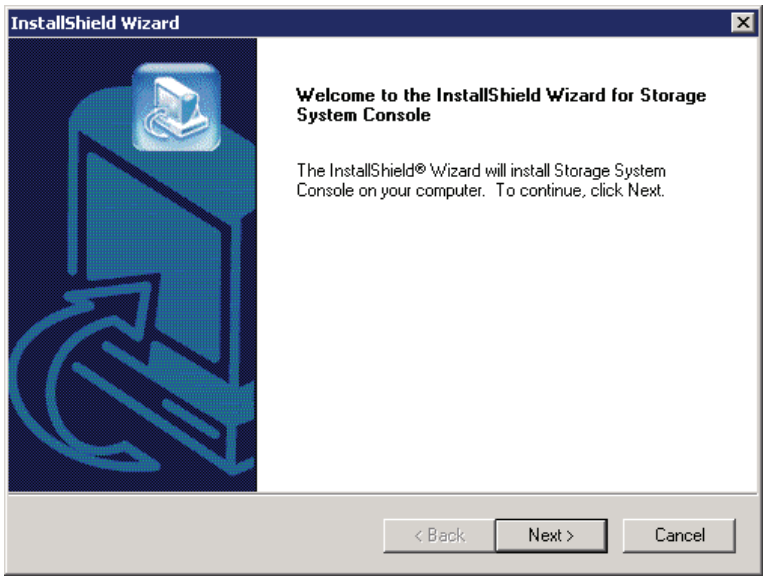
InstallShield Wizard
Welcome to the InstallShield Wizard for Storage System Console
The InstallShield® Wizard will install Storage System Console on your computer. To continue, click Next.
< Back
Next >
Cancel

2. The following screen appears. Enter the pertinent information, then click on **Next** to continue.

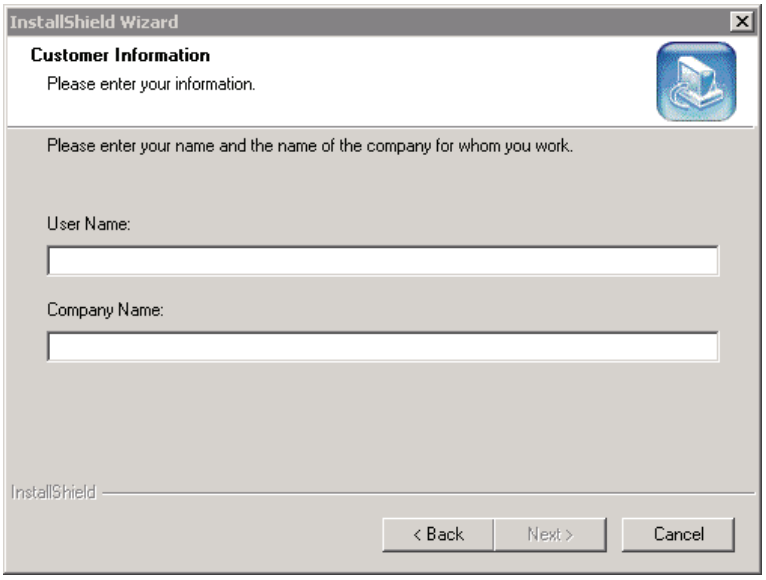

3. The following screen appears. Select the default destination folder or change it by clicking on **Browse**. Then click on **Next** to continue.

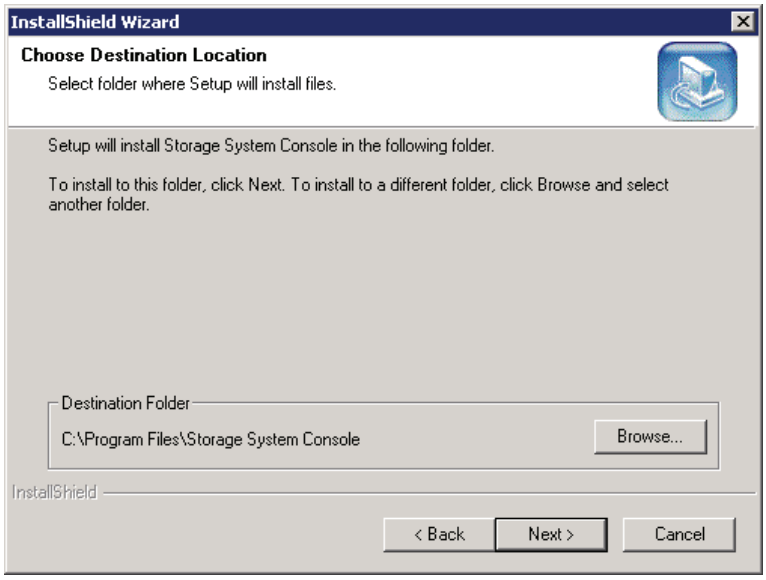
InstallShield Wizard
Choose Destination Location
Select folder where Setup will install files.
Setup will install Storage System Console in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Storage System Console
Browse...
InstallShield
< Back
Next >
Cancel

4. The following screen appears. Click on **Next** to start copying the files.

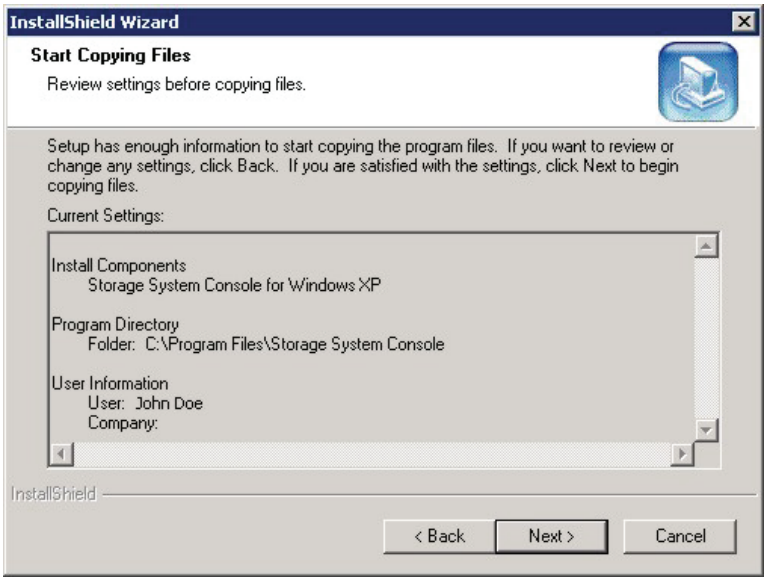
InstallShield Wizard
Start Copying Files
Review settings before copying files.
Setup has enough information to start copying the program files. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin copying files.
Current Settings:
Install Components
Storage System Console for Windows XP
Program Directory
Folder: C:\Program Files\Storage System Console
User Information
User: John Doe
Company:
InstallShield
< Back
Next >
Cancel

5. The following screen appears. To start the **Storage System Console** click on the radio button besides **Launch Storage System Console**. Then click on **Finish** to exit the installation.

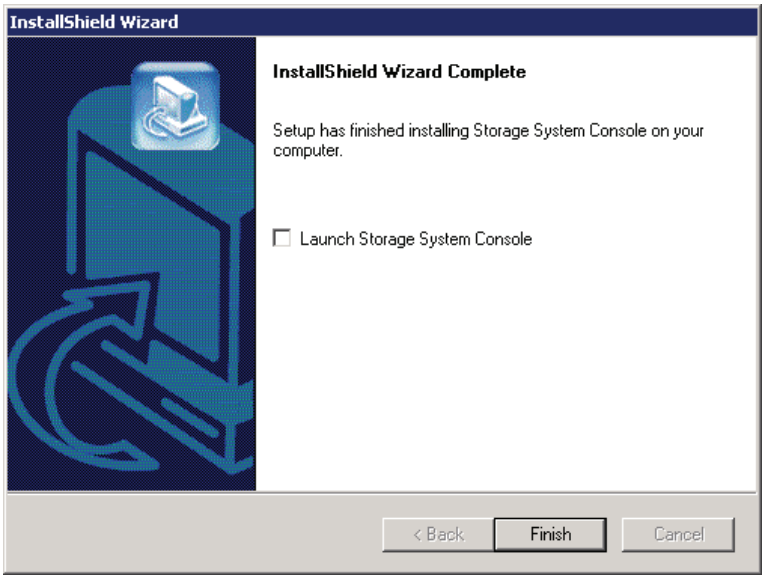

3.2 Initializing the Hard Disk(s)

After you insert the hard disk into the system for the first time or when you replace them with a new disk, you need to initialize the hard disk before using the system.

1. Upon starting the **Storage System Console**, the following screen appears. As soon as you start the Console, it automatically scans the network for storage systems. This might take a few minutes. As soon as the scan is complete, the left pane displays a tree view of all the storage systems it found. Select the storage system that you want to manage (for example, **MNAS4100**).

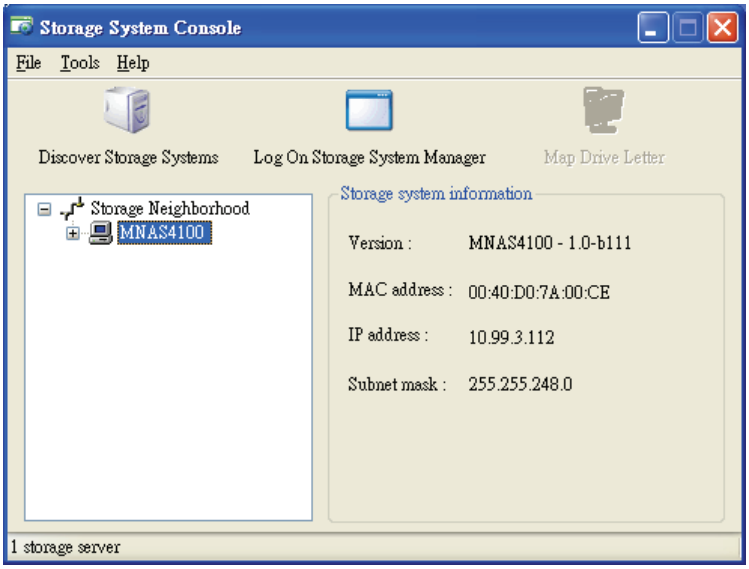

> **NOTE:** The next time you want to start the **Storage System Console**, click on **Start**, then **Programs**, then **Storage System Console**.

2. Click on **Log On Storage System Manager**.

3. The following screen appears. Enter the default user name **admin** and default password **storage**.

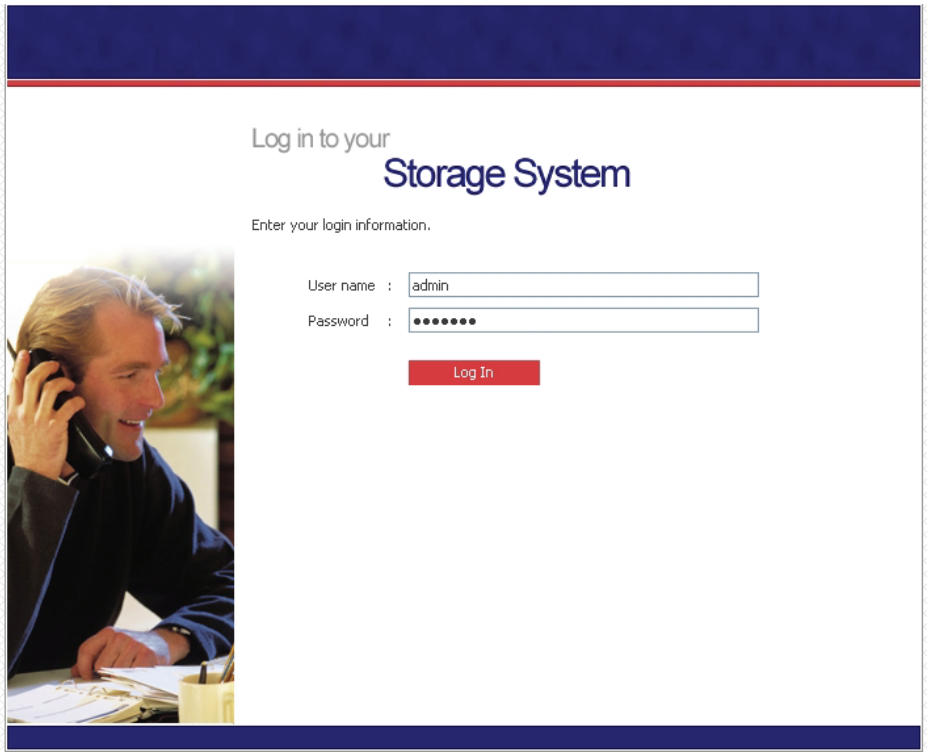

4. Click on **Log In**.

5. The following screen appears. Click on **Scan**.

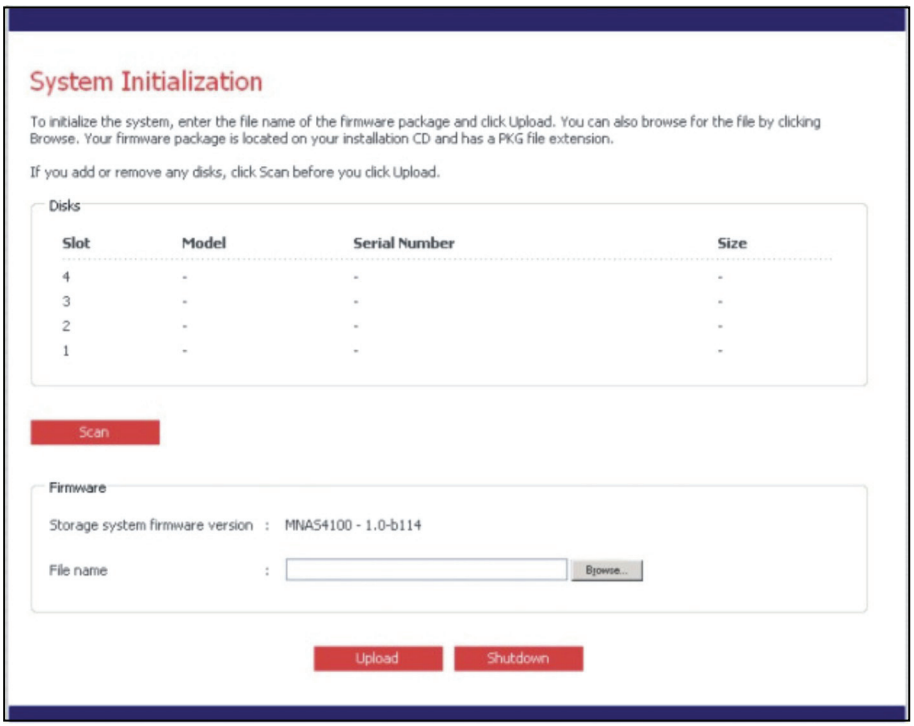
System Initialization
To initialize the system, enter the file name of the firmware package and click Upload. You can also browse for the file by clicking Browse. Your firmware package is located on your installation CD and has a PKG file extension.
If you add or remove any disks, click Scan before you click Upload.
Disks
Slot
Model
Serial Number
Size
4 - - -
3 - - -
2 - - -
1 - - -
Scan
Firmware
Storage system firmware version : MNAS4100 - 1.0-b114
File name :
Browse...
Upload
Shutdown

6. The following screen appears. Click on **Browse** to select the firmware file under the **`FW_Upgrade`** folder of your included CD.

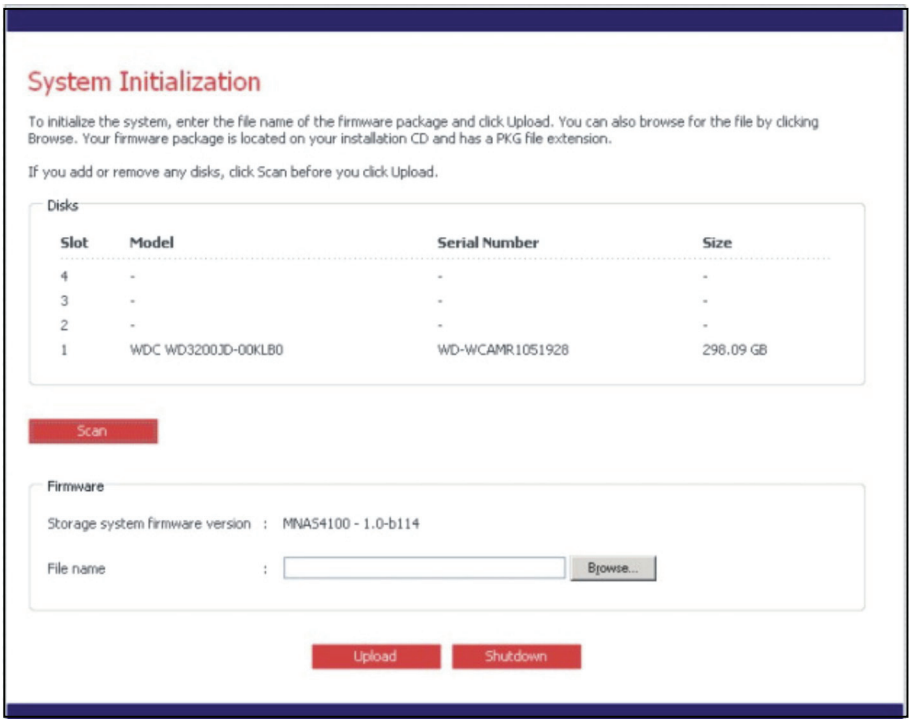
System Initialization
To initialize the system, enter the file name of the firmware package and click Upload. You can also browse for the file by clicking Browse. Your firmware package is located on your installation CD and has a PKG file extension.
If you add or remove any disks, click Scan before you click Upload.
Disks
Slot
Model
Serial Number
Size
4 - - -
3 - - -
2 - - -
1 WDC WD3200JD-00KLB0 WD-WCAMR1051928 298.09 GB
Scan
Firmware
Storage system firmware version : MNA54100 - 1.0-b114
File name :
Browse...
Upload
Shutdown

7. Click on **Upload** and the following screens would appear in sequence.

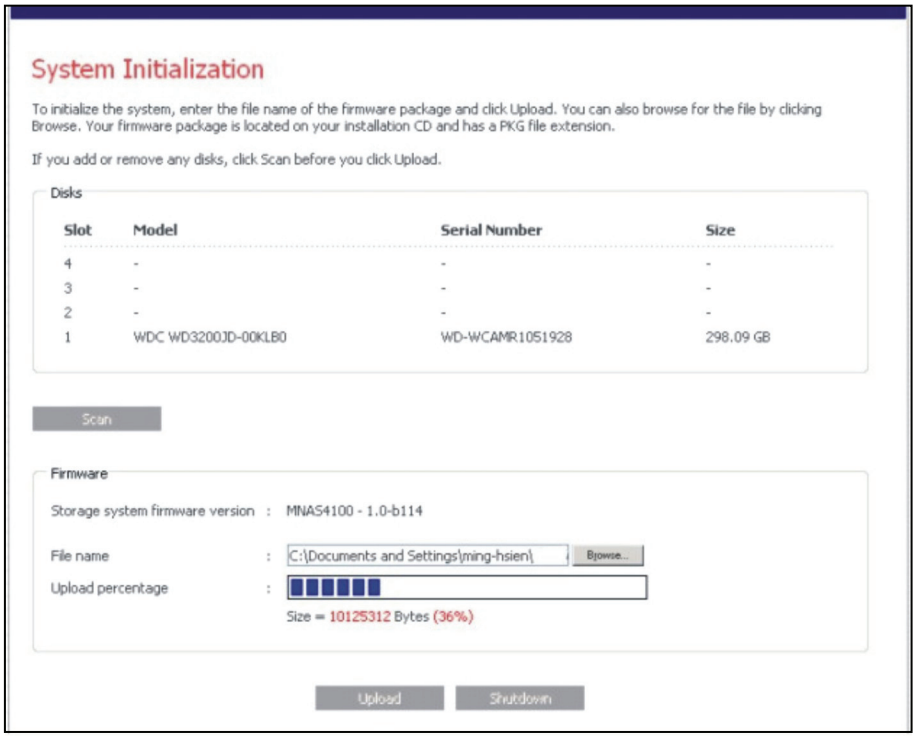
System Initialization
To initialize the system, enter the file name of the firmware package and click Upload. You can also browse for the file by clicking Browse. Your firmware package is located on your installation CD and has a PKG file extension.
If you add or remove any disks, click Scan before you click Upload.
Disks
Slot Model Serial Number Size
4 - - -
3 - - -
2 - - -
1 WDC WD3200JD-00KLB0 WD-WCAMR1051928 298.09 GB
Scan
Firmware
Storage system firmware version : MNAS4100 - 1.0-b114
File name : C:\Documents and Settings\ming-hsien\
Browse...
Upload percentage :
Size = 10125312 Bytes (36%)
Upload
Shutdown

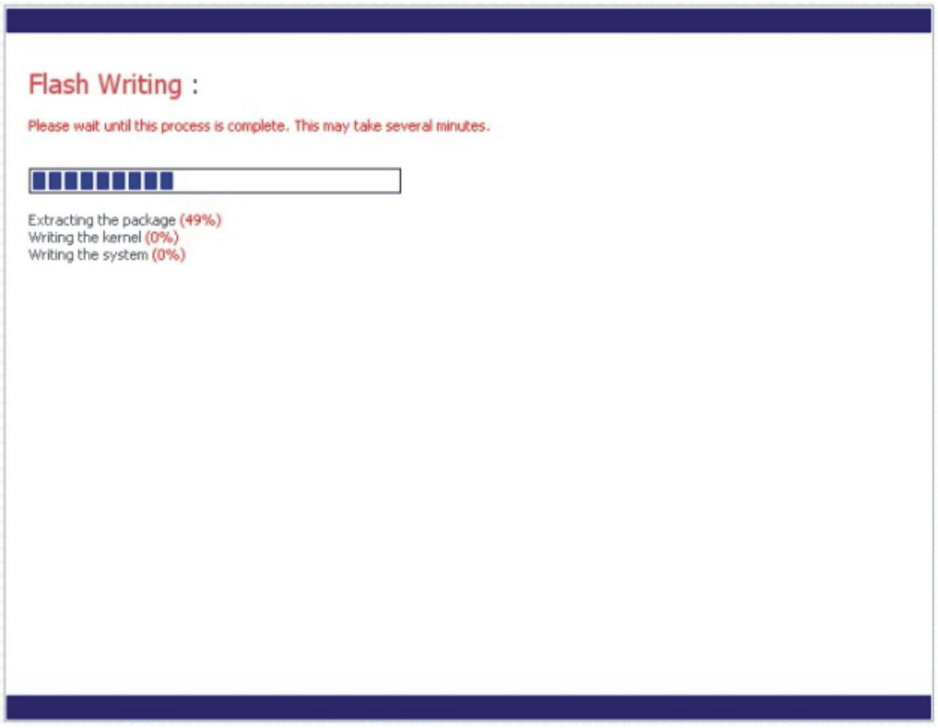
Flash Writing :
Please wait until this process is complete. This may take several minutes.
Extracting the package (49%)
Writing the kernel (0%)
Writing the system (0%)

8. The system will reboot.

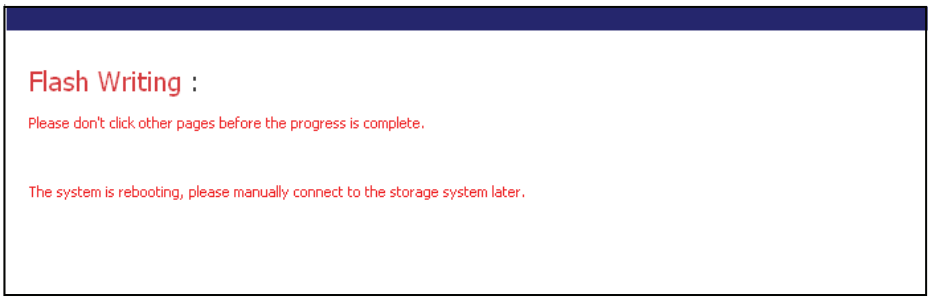
Flash Writing :
Please don't click other pages before the progress is complete.
The system is rebooting, please manually connect to the storage system later.

9. After rebooting, run the **Storage System Console** by clicking on **Start**, then **Programs**, then **Storage System Console**. Wait awhile as it scans the network for storage systems. The following screen appears. Click on **Discover Storage Systems.**

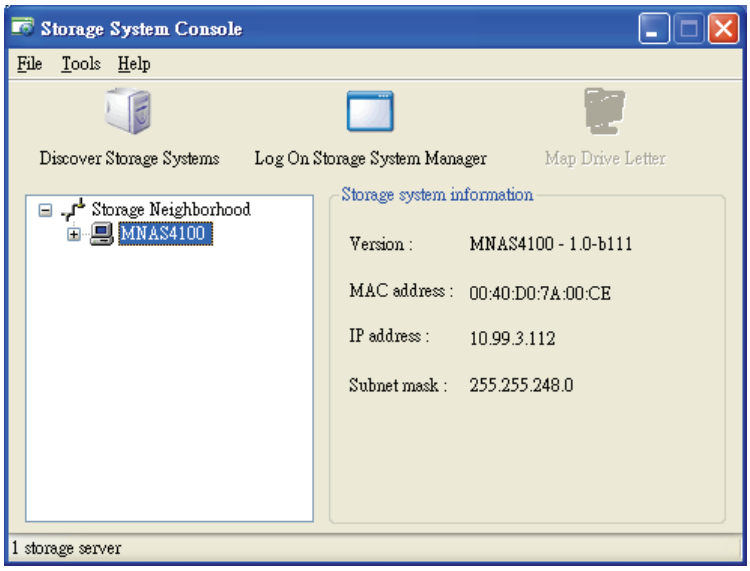

10. The following screen appears. Click on **Next** to continue.

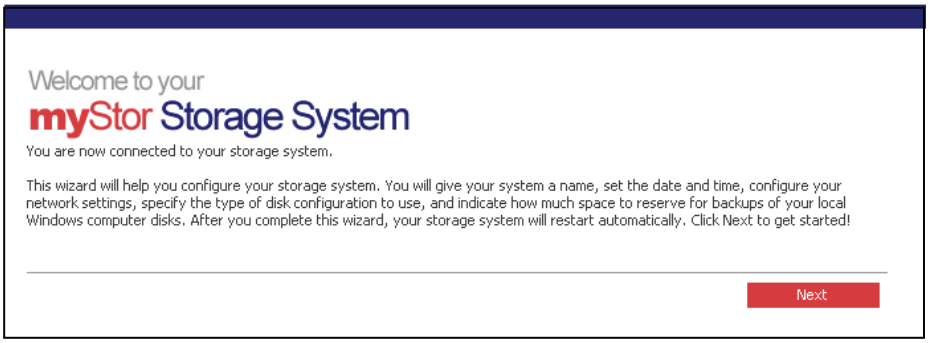
Welcome to your
myStor Storage System
You are now connected to your storage system.
This wizard will help you configure your storage system. You will give your system a name, set the date and time, configure your network settings, specify the type of disk configuration to use, and indicate how much space to reserve for backups of your local Windows computer disks. After you complete this wizard, your storage system will restart automatically. Click Next to get started!
Next

11. The following screen appears. Enter the **Storage system name**, then click on **Next**.

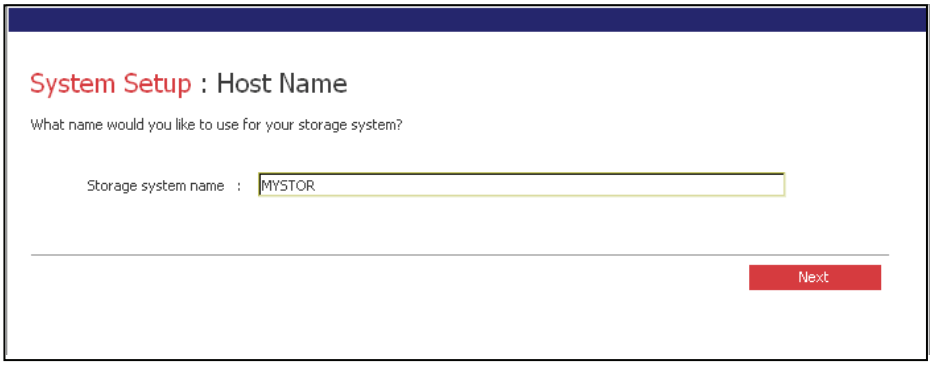

12. The following screen appears. Set the **Date**, **Time**, and **Time zone**, then click on **Next**.

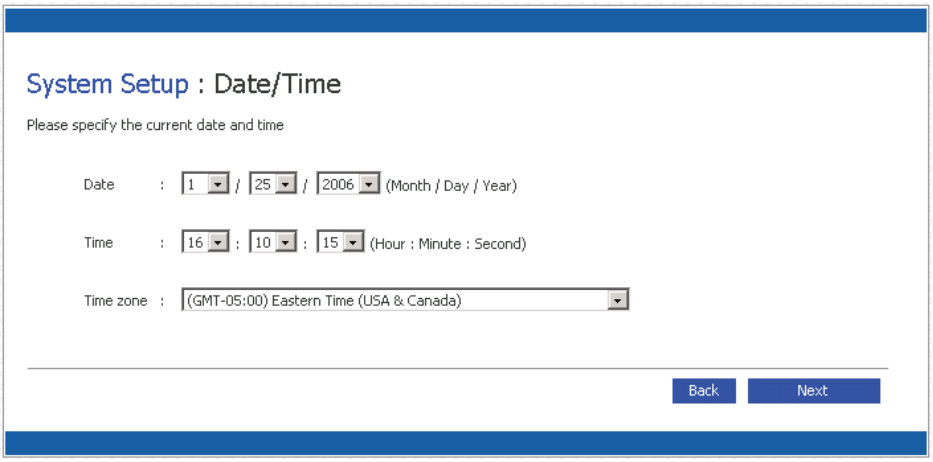
System Setup : Date/Time
Please specify the current date and time
Date : 1 / 25 / 2006 (Month / Day / Year)
Time : 16 : 10 : 15 (Hour : Minute : Second)
Time zone : (GMT-05:00) Eastern Time (USA & Canada)
Back
Next

13. The following screen appears. Set the network settings, then click on **Next**.

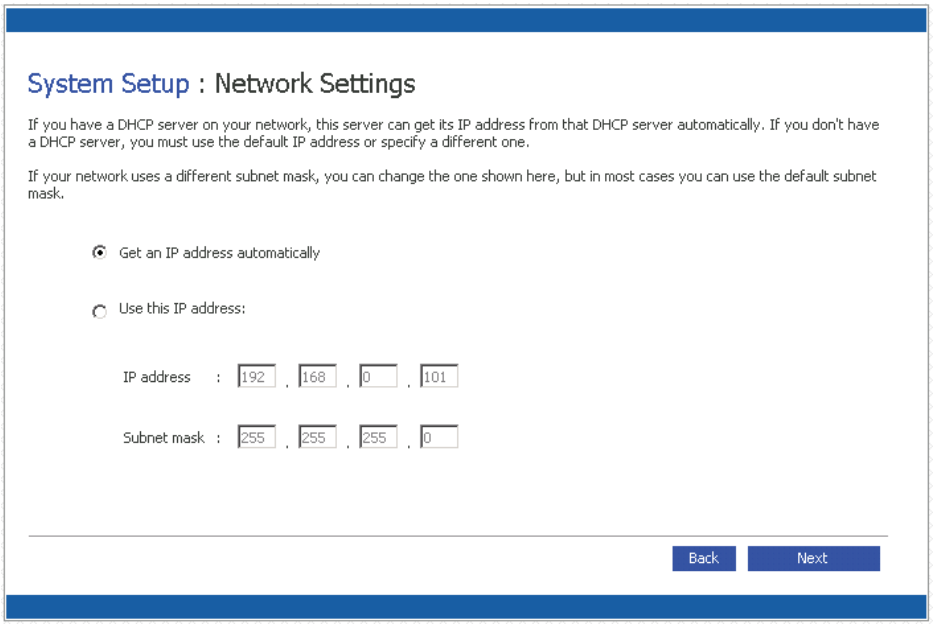
System Setup : Network Settings
If you have a DHCP server on your network, this server can get its IP address from that DHCP server automatically. If you don't have a DHCP server, you must use the default IP address or specify a different one.
If your network uses a different subnet mask, you can change the one shown here, but in most cases you can use the default subnet mask.
Get an IP address automatically
Use this IP address:
IP address : 192 . 168 . 0 . 101
Subnet mask : 255 . 255 . 255 . 0
Back
Next

14. The following screen appears. Select a RAID mode, then click on **Next**.

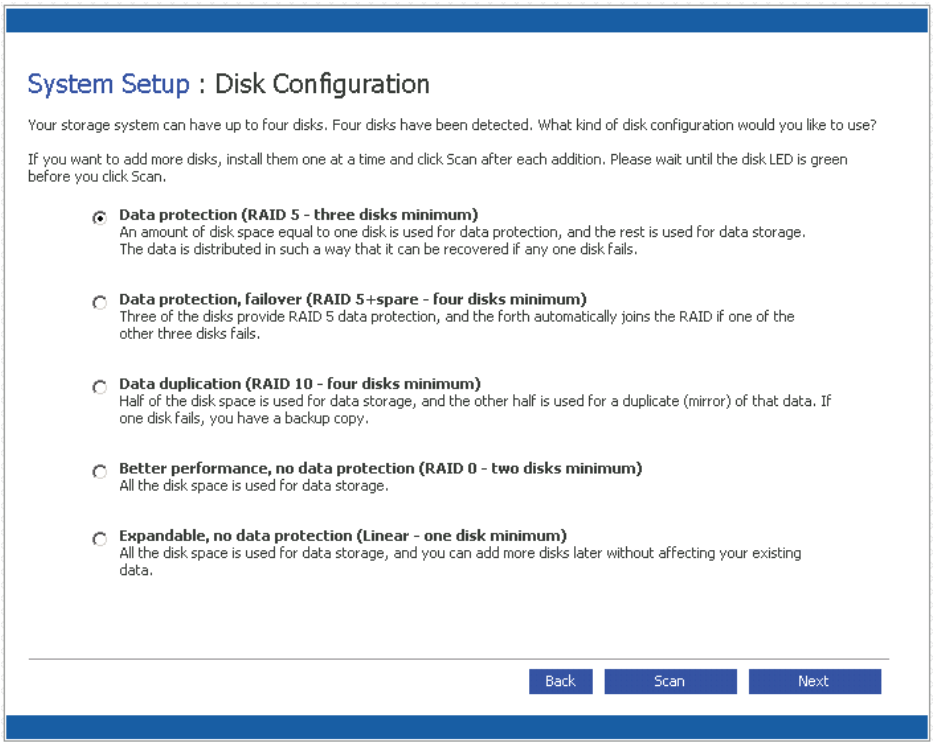
System Setup : Disk Configuration
Your storage system can have up to four disks. Four disks have been detected. What kind of disk configuration would you like to use?
If you want to add more disks, install them one at a time and click Scan after each addition. Please wait until the disk LED is green before you click Scan.
Data protection (RAID 5 - three disks minimum)
An amount of disk space equal to one disk is used for data protection, and the rest is used for data storage. The data is distributed in such a way that it can be recovered if any one disk fails.
Data protection, failover (RAID 5+spare - four disks minimum)
Three of the disks provide RAID 5 data protection, and the forth automatically joins the RAID if one of the other three disks fails.
Data duplication (RAID 10 - four disks minimum)
Half of the disk space is used for data storage, and the other half is used for a duplicate (mirror) of that data. If one disk fails, you have a backup copy.
Better performance, no data protection (RAID 0 - two disks minimum)
All the disk space is used for data storage.
Expandable, no data protection (Linear - one disk minimum)
All the disk space is used for data storage, and you can add more disks later without affecting your existing data.
Back
Scan
Next

> **NOTE:** Your MNAS uses RAID (Redundant Array of Independent Disks) technology to manage up to four hard disks. Refer to the later section “Disk Configurations” (see page 65) to learn more about choosing the type of RAID for your system.

15. The following screen appears. Select the **Number of disks to back up**, then click on **Next**.

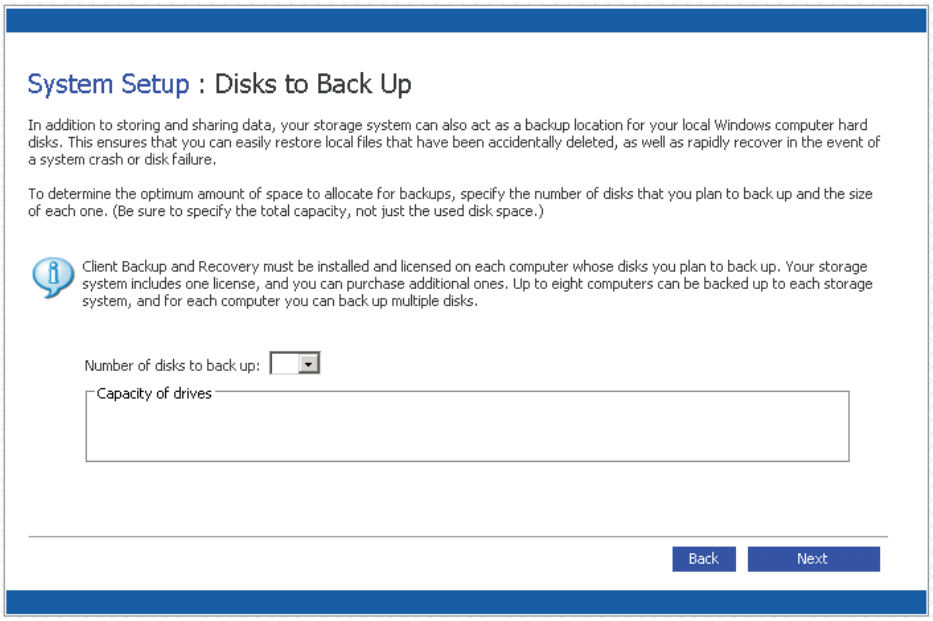
System Setup : Disks to Back Up
In addition to storing and sharing data, your storage system can also act as a backup location for your local Windows computer hard disks. This ensures that you can easily restore local files that have been accidentally deleted, as well as rapidly recover in the event of a system crash or disk failure.
To determine the optimum amount of space to allocate for backups, specify the number of disks that you plan to back up and the size of each one. (Be sure to specify the total capacity, not just the used disk space.)
Client Backup and Recovery must be installed and licensed on each computer whose disks you plan to back up. Your storage system includes one license, and you can purchase additional ones. Up to eight computers can be backed up to each storage system, and for each computer you can back up multiple disks.
Number of disks to back up:
Capacity of drives
Back
Next

> **NOTE:** The backup software is optional, if the storage system does not contain the backup software, and you do not plan to use the backup feature in the future, please select **0**.

16. The following screen appears. Enter the capacity of the disks to back up, then click on **Next**.

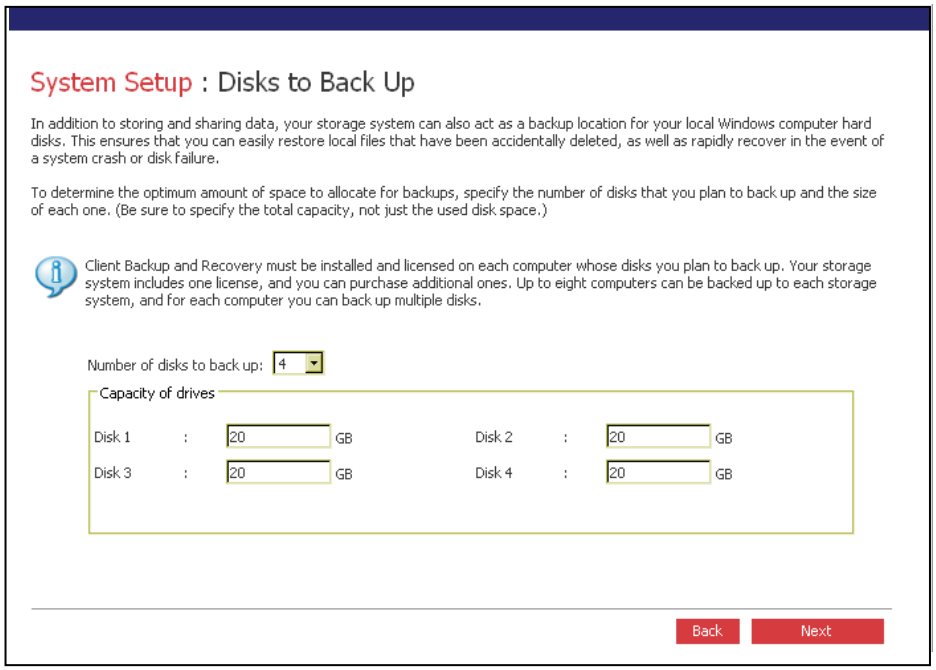
System Setup : Disks to Back Up
In addition to storing and sharing data, your storage system can also act as a backup location for your local Windows computer hard disks. This ensures that you can easily restore local files that have been accidentally deleted, as well as rapidly recover in the event of a system crash or disk failure.
To determine the optimum amount of space to allocate for backups, specify the number of disks that you plan to back up and the size of each one. (Be sure to specify the total capacity, not just the used disk space.)
Client Backup and Recovery must be installed and licensed on each computer whose disks you plan to back up. Your storage system includes one license, and you can purchase additional ones. Up to eight computers can be backed up to each storage system, and for each computer you can back up multiple disks.
Number of disks to back up: 4
Capacity of drives
Disk 1 : 20 GB
Disk 2 : 20 GB
Disk 3 : 20 GB
Disk 4 : 20 GB
Back
Next

17. The following screen appears. Set the amount (percentage) of disk space to be allocated for shared folders and backups, then click on **Finish.**

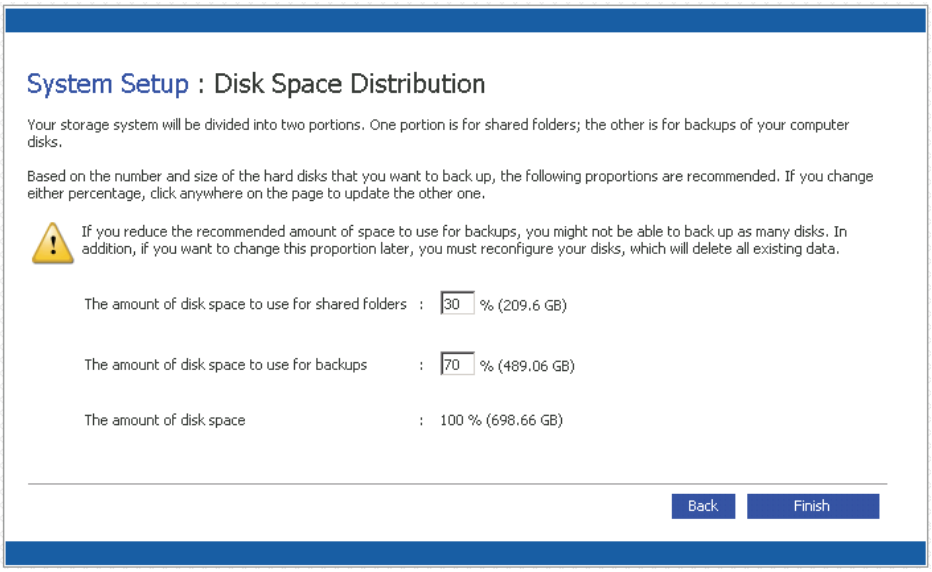
System Setup : Disk Space Distribution
Your storage system will be divided into two portions. One portion is for shared folders; the other is for backups of your computer disks.
Based on the number and size of the hard disks that you want to back up, the following proportions are recommended. If you change either percentage, click anywhere on the page to update the other one.
If you reduce the recommended amount of space to use for backups, you might not be able to back up as many disks. In addition, if you want to change this proportion later, you must reconfigure your disks, which will delete all existing data.
The amount of disk space to use for shared folders : 30 % (209.6 GB)
The amount of disk space to use for backups : 70 % (489.06 GB)
The amount of disk space : 100 % (698.66 GB)
Back
Finish

18. On the next dialog box click on **OK** to confirm setup information will be written to the system. The following screen would appear.

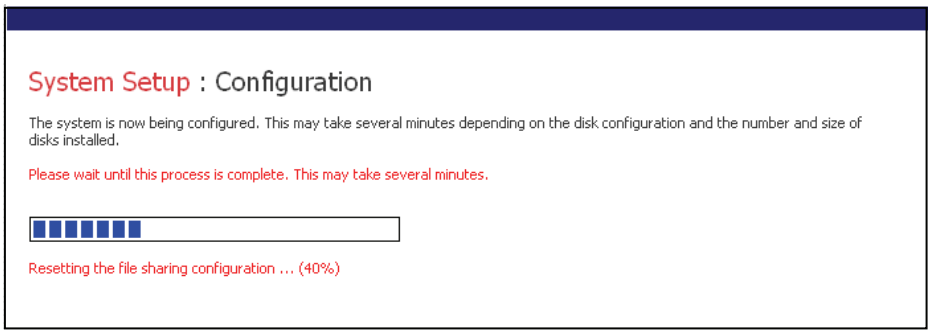
System Setup : Configuration
The system is now being configured. This may take several minutes depending on the disk configuration and the number and size of disks installed.
Please wait until this process is complete. This may take several minutes.
Resetting the file sharing configuration ... (40%)

19. The system will reboot.

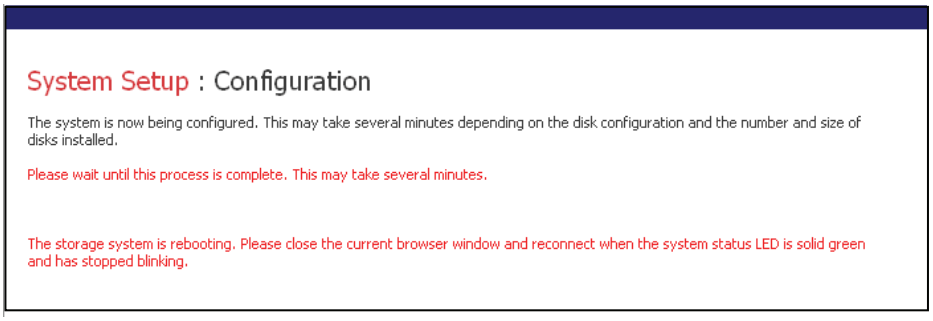
System Setup : Configuration
The system is now being configured. This may take several minutes depending on the disk configuration and the number and size of disks installed.
Please wait until this process is complete. This may take several minutes.
The storage system is rebooting. Please close the current browser window and reconnect when the system status LED is solid green and has stopped blinking.

3.3 Starting Web Management

To perform system management using the Web Management:

1. Run the **Storage System Console** by clicking on **Start**, then **Programs**, then **Storage System Console**. As soon as you start the Console, it automatically scans the network for storage systems. This might take a few minutes. As soon as the scan is complete, the left pane displays a tree view of all the storage systems it found. The following screen appears.

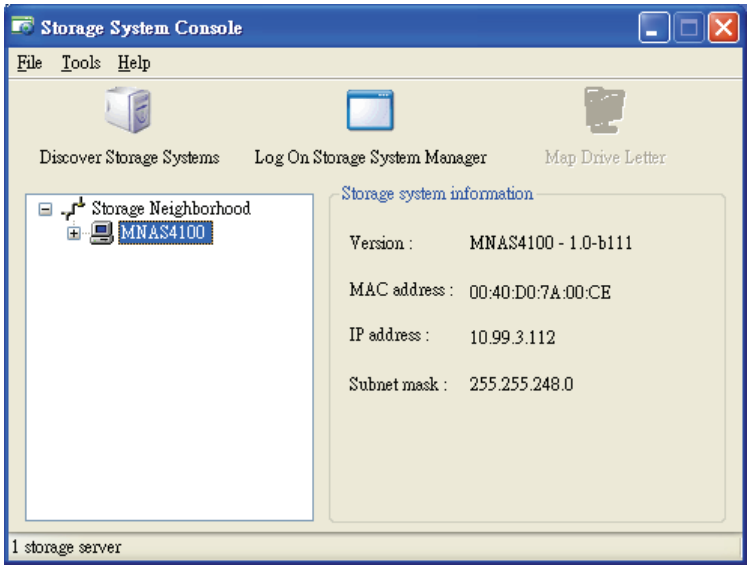

2. In the left pane, select the name of the storage system that you want to manage (for example, **MNAS4100**), then click on **Log On Storage System Manager**.

> **NOTE:** If you connect a storage system to the network after the Console has already scanned it, or if you change the IP address of the storage system, you must click on **Discover Storage Systems** to scan the network again and update the tree in the left pane.

3. The following screen appears. Input the default user name **admin** and the default password **storage**.

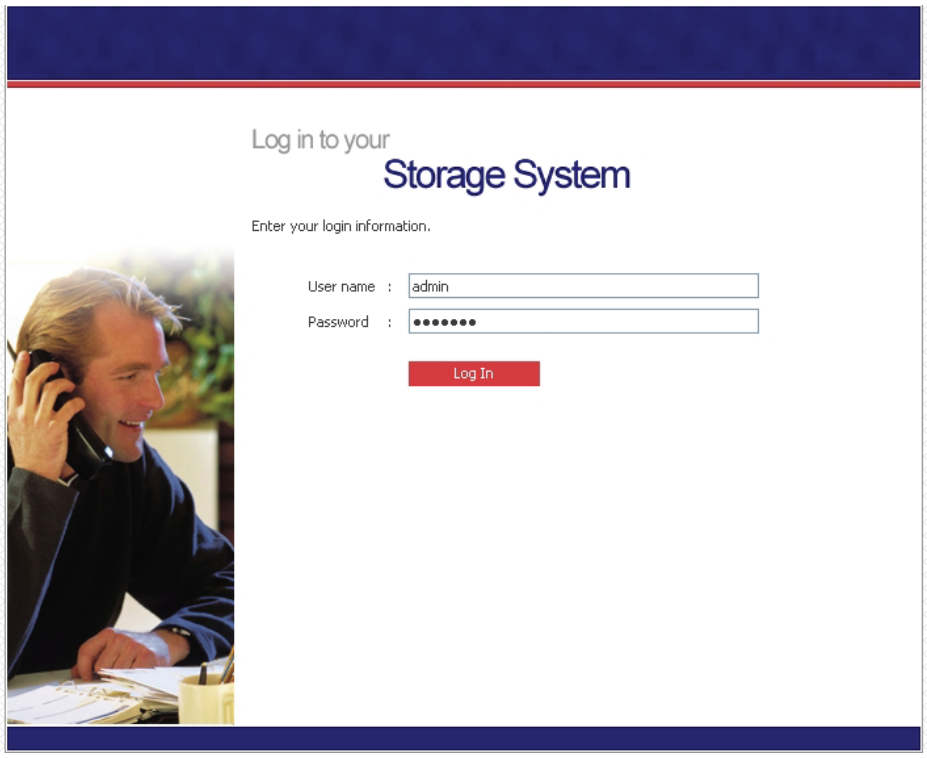

4. Then click on **Log In**.

   Refer to the next section on performing various system management tasks.

3.4 System Management

You can perform system management via the Web UI, Web Management. (See previous section on accessing Web Management.)

Users Page

Displays a list of all currently configured users and lets you add, modify, and remove users. This area also lets you add, modify, and remove groups.

Users & Computers

1. To get started, click the **Users** button on your homepage. The following screen appears.

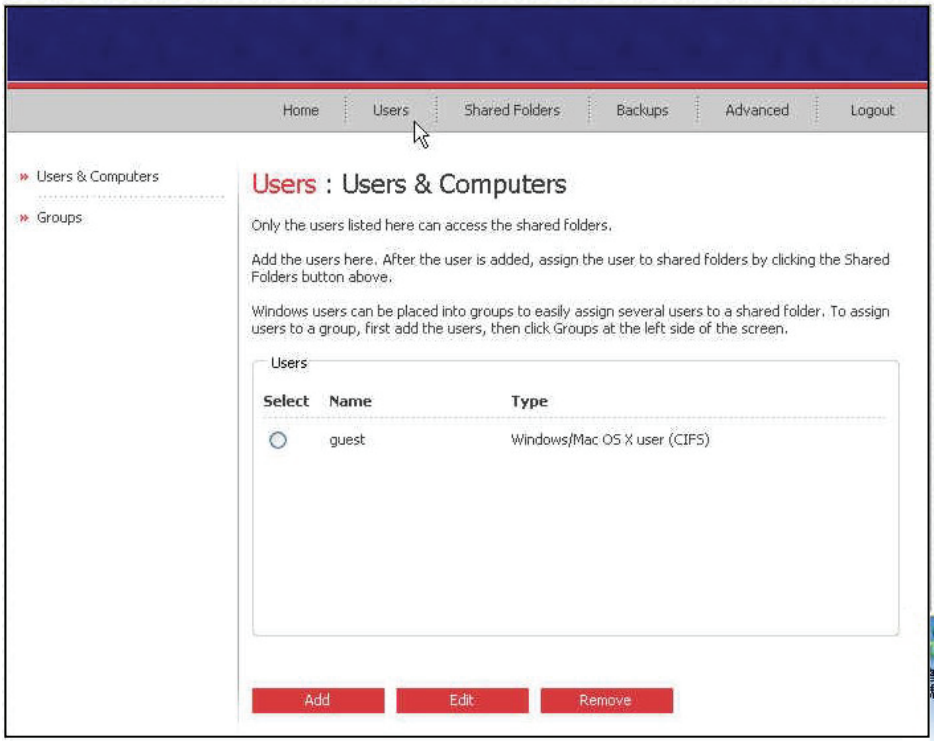
Home
Users
Shared Folders
Backups
Advanced
Logout
Users & Computers
Groups
Users : Users & Computers
Only the users listed here can access the shared folders.
Add the users here. After the user is added, assign the user to shared folders by clicking the Shared Folders button above.
Windows users can be placed into groups to easily assign several users to a shared folder. To assign users to a group, first add the users, then click Groups at the left side of the screen.
Users
Select
Name
Type
guest
Windows/Mac OS X user (CIFS)
Add
Edit
Remove

2. Click on **Add** and the following screen appears, allowing you to specify the type of user (Windows/Mac OS X or Linux/Other Mac) you want to add.

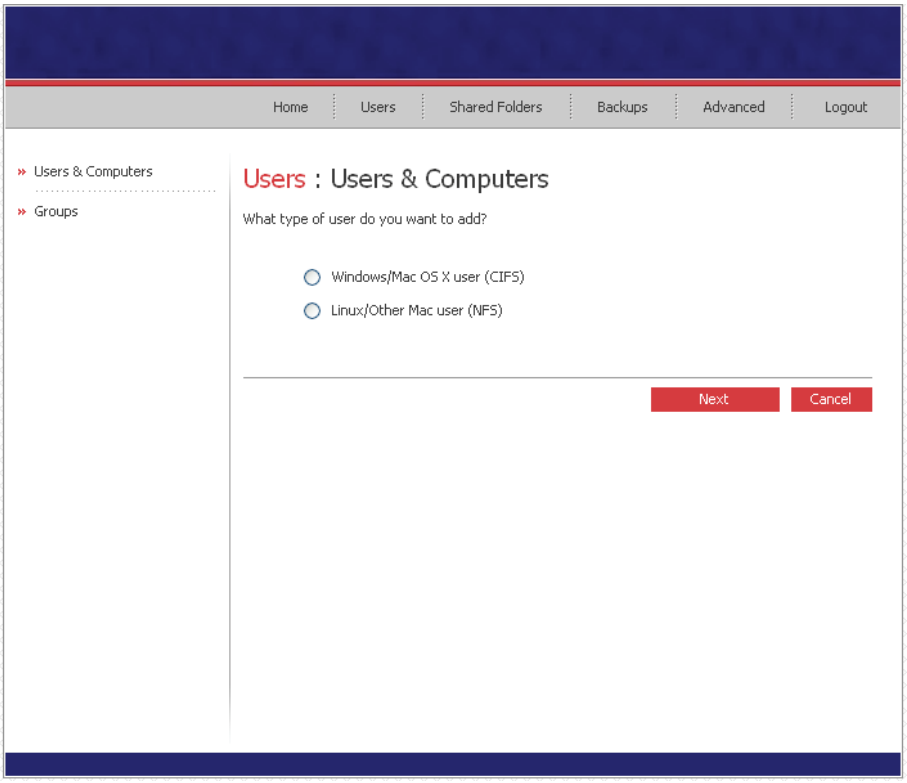

3. Click on **Next** and the following screen appears. You must provide the requested user information. For Windows/Mac OS X user (CIFS) –

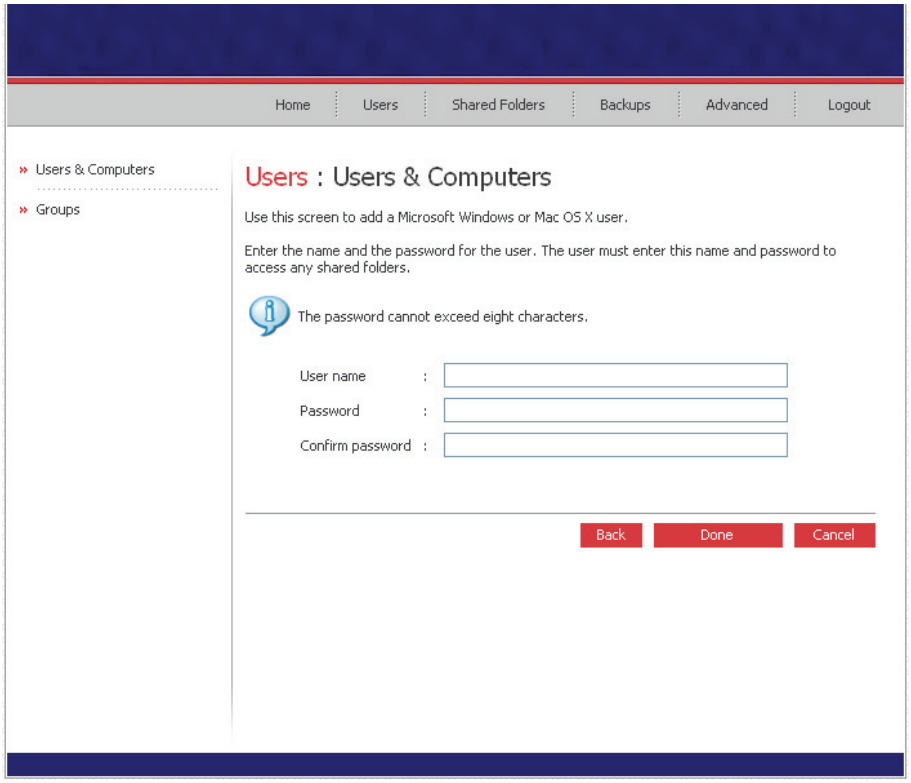

For Linux/other Mac user (NFS) –

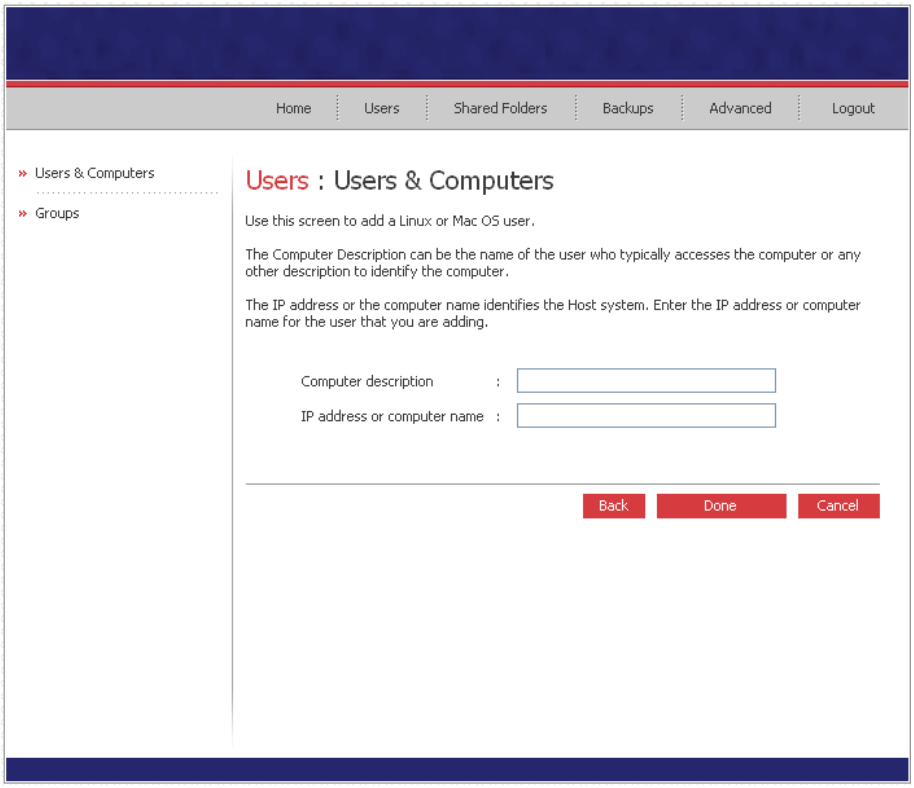
Home
Users
Shared Folders
Backups
Advanced
Logout
Users & Computers
Groups
Users : Users & Computers
Use this screen to add a Linux or Mac OS user.
The Computer Description can be the name of the user who typically accesses the computer or any other description to identify the computer.
The IP address or the computer name identifies the Host system. Enter the IP address or computer name for the user that you are adding.
Computer description :
IP address or computer name :
Back
Done
Cancel

4. Click on **Done** and the new user would be added. Repeat the above steps until you have added all the users that you want to add at this time (you can always add more users later).

Groups

Placing users into groups makes it easier to give several users access to the same shared folder at once.

1. Click on **Groups** on the **Users** page. The following screen appears.

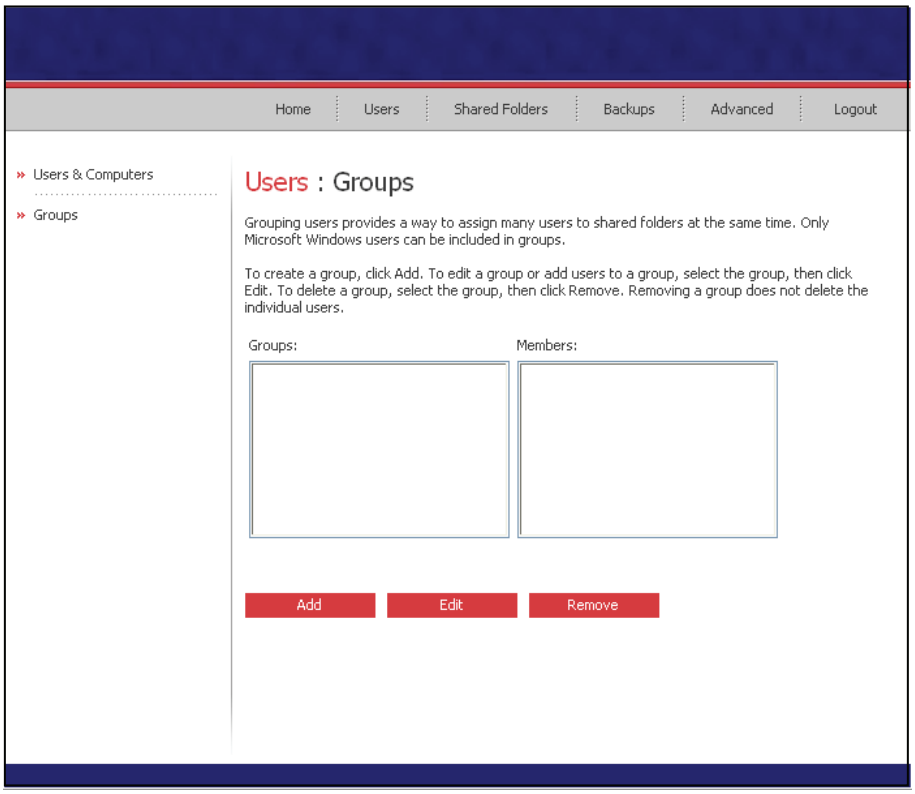
Home
Users
Shared Folders
Backups
Advanced
Logout
Users & Computers
Groups
Users : Groups
Grouping users provides a way to assign many users to shared folders at the same time. Only Microsoft Windows users can be included in groups.
To create a group, click Add. To edit a group or add users to a group, select the group, then click Edit. To delete a group, select the group, then click Remove. Removing a group does not delete the individual users.
Groups:
Members:
Add
Edit
Remove

2. Click on **Add** and the following screen appears. Enter a group name and add all or selected users to this group.

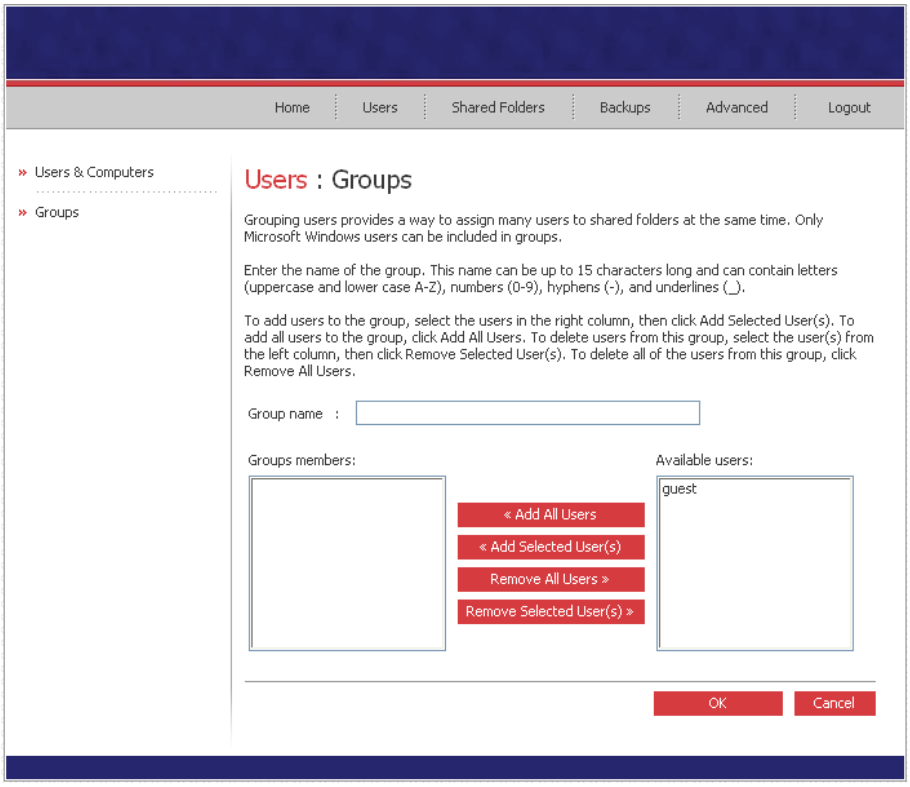
Home
Users
Shared Folders
Backups
Advanced
Logout
» Users & Computers
» Groups
Users : Groups
Grouping users provides a way to assign many users to shared folders at the same time. Only Microsoft Windows users can be included in groups.
Enter the name of the group. This name can be up to 15 characters long and can contain letters (uppercase and lower case A-Z), numbers (0-9), hyphens (-), and underlines (_).
To add users to the group, select the users in the right column, then click Add Selected User(s). To add all users to the group, click Add All Users. To delete users from this group, select the user(s) from the left column, then click Remove Selected User(s). To delete all of the users from this group, click Remove All Users.
Group name :
Groups members:
Available users:
guest
« Add All Users
« Add Selected User(s)
Remove All Users »
Remove Selected User(s) »
OK
Cancel

You can also remove all or selected users from a group.

Shared Folders Page

Displays a list of all currently configured and shared folders and lets you add shared folders, change which users can access them, and remove them.

1. Click the **Shared Folders** button on your homepage. The following screen appears.

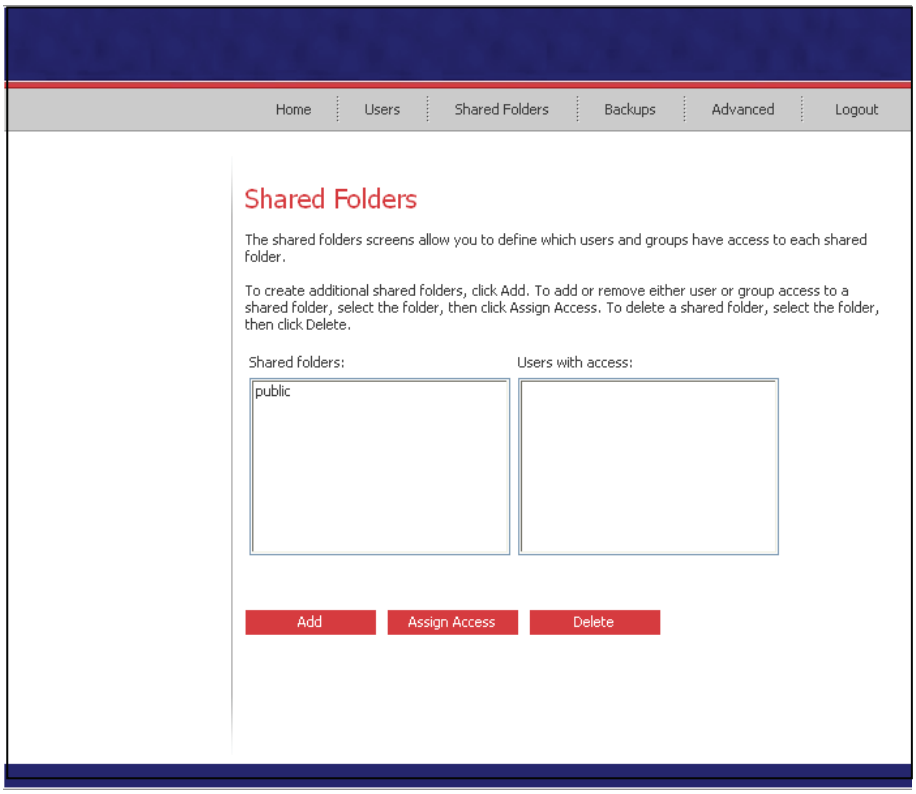
Home
Users
Shared Folders
Backups
Advanced
Logout
Shared Folders
The shared folders screens allow you to define which users and groups have access to each shared folder.
To create additional shared folders, click Add. To add or remove either user or group access to a shared folder, select the folder, then click Assign Access. To delete a shared folder, select the folder, then click Delete.
Shared folders:
Users with access:
public
Add
Assign Access
Delete

2. Select the shared folder whose user access you want to change.

3. Click on **Assign Access** and the following screen appears. For Windows/Mac OS X user (CIFS) –

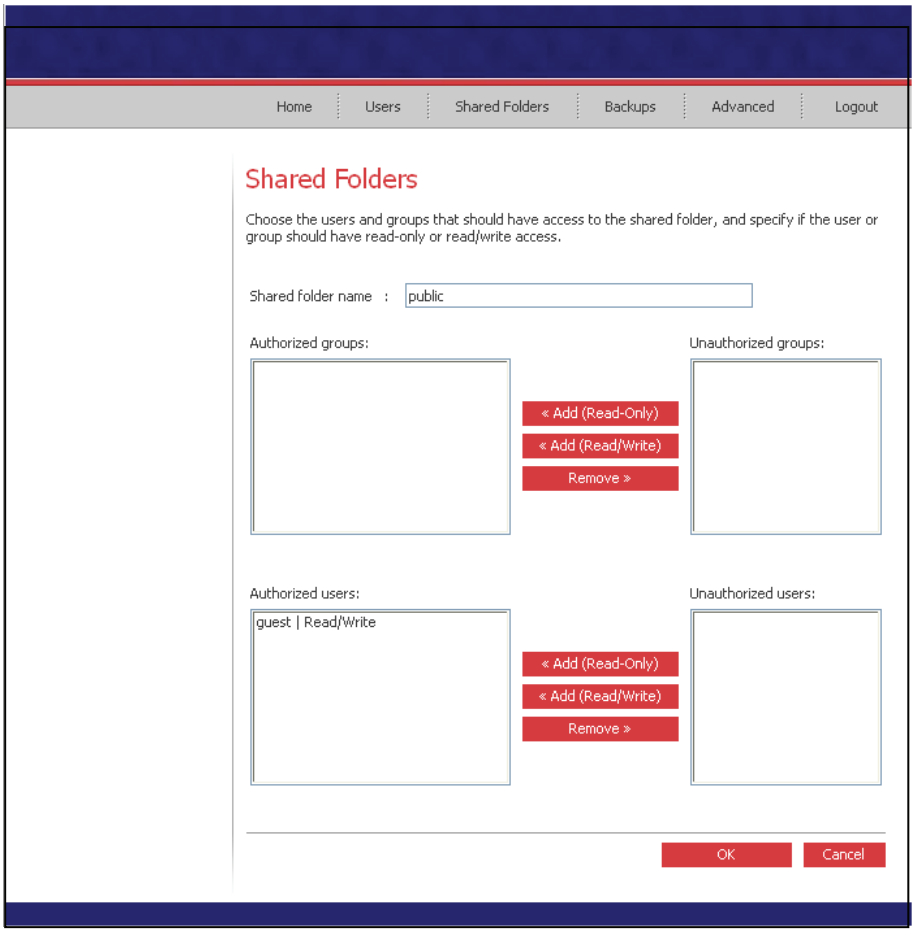

For Linux/other Mac user (NFS) –

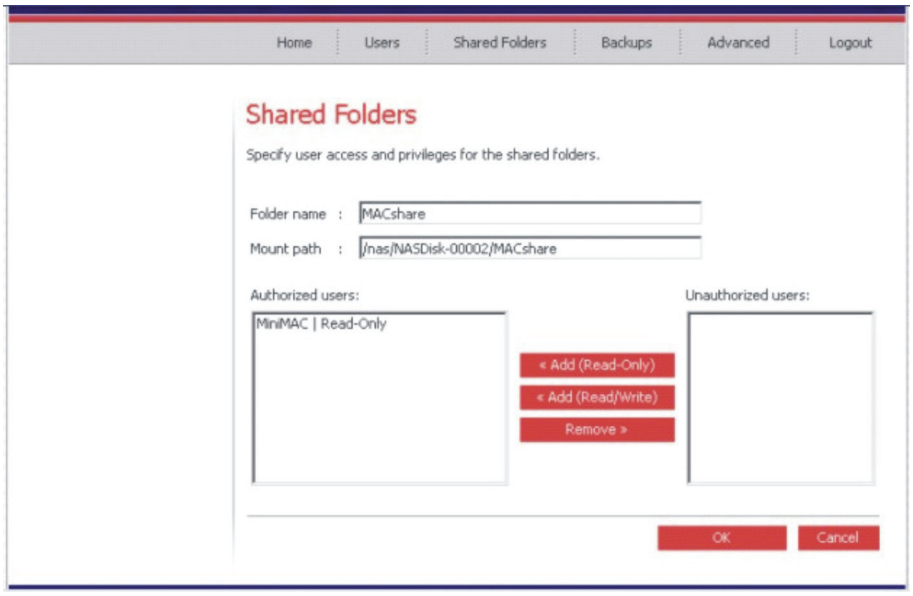

4. You can Add (specify as Read-Only or Read/Write) users/groups to, as well as Remove existing users/groups from Shared Folders.
5. Click on **OK**.

Backups Page (Optional)

> **NOTE:** If your storage system does not contain the backup software, skip this section and proceed to the next section **Advanced Page**.

The **Backups** page displays a list of all computer disk backups that currently exist and lets you change the recovery disc password or delete the backups for a particular computer hard disk.

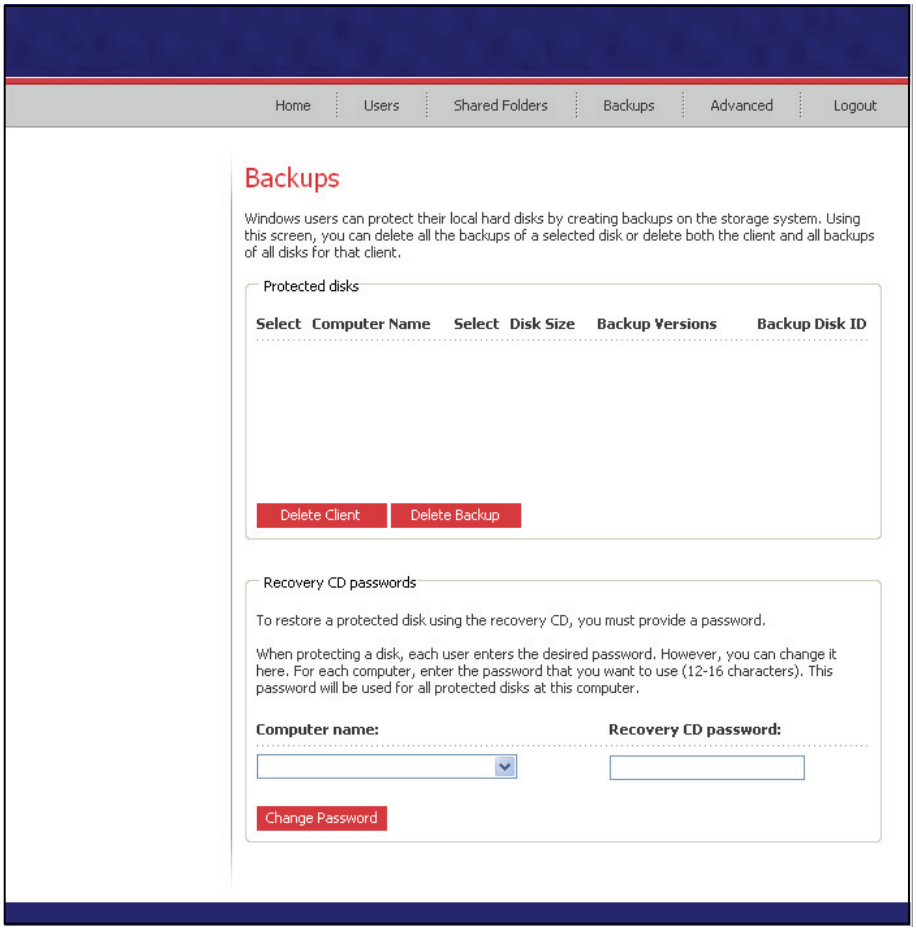
Home
Users
Shared Folders
Backups
Advanced
Logout
Backups
Windows users can protect their local hard disks by creating backups on the storage system. Using this screen, you can delete all the backups of a selected disk or delete both the client and all backups of all disks for that client.
Protected disks
Select Computer Name
Select Disk Size
Backup Versions
Backup Disk ID
Delete Client
Delete Backup
Recovery CD passwords
To restore a protected disk using the recovery CD, you must provide a password.
When protecting a disk, each user enters the desired password. However, you can change it here. For each computer, enter the password that you want to use (12-16 characters). This password will be used for all protected disks at this computer.
Computer name:
Recovery CD password:
Change Password

Changing the Recovery Disc Password

1. In the **Computer name** list, select the name of the computer whose recovery disc password you want to change.
2. In the **Recovery CD password** text box, type the password to use. The password must be 12~16 characters long.
3. Click on **Change Password**.

Deleting a Backup

1. Select the radio button next to the disk whose backups you want to delete (in the second **Select** column).
2. Click on **Delete Backup**.
3. When prompted to confirm the deletion, click on **Yes**.

Deleting a Client

1. Select the radio button to the left of the computer whose backups and computer name you want to delete from the storage system (in the first **Select** column).
2. Click on **Delete Client**.
3. When prompted to confirm the deletion, click on **Yes**.

Advanced Page

Provides access to advanced storage system configuration options, such as setting up email alerts; upgrading the firmware; changing the system, network, or disk configuration settings; viewing information about system events; and shutting down the system remotely.

Email Alerts

Allows you to set up the storage system to notify up to three people via email if a problem occurs – for example, if one of the disks fails, or if insufficient space is available for creating new files or performing a backup.

To take advantage of this feature, you must have access to an SMTP email server, either within your own network or through an Internet service provider.

> **NOTE:** In order to be able to send out email alerts, the "Authentication" feature of the intended email recipient must be disabled.

1. Click the **Advanced** button on your homepage. The following screen appears.

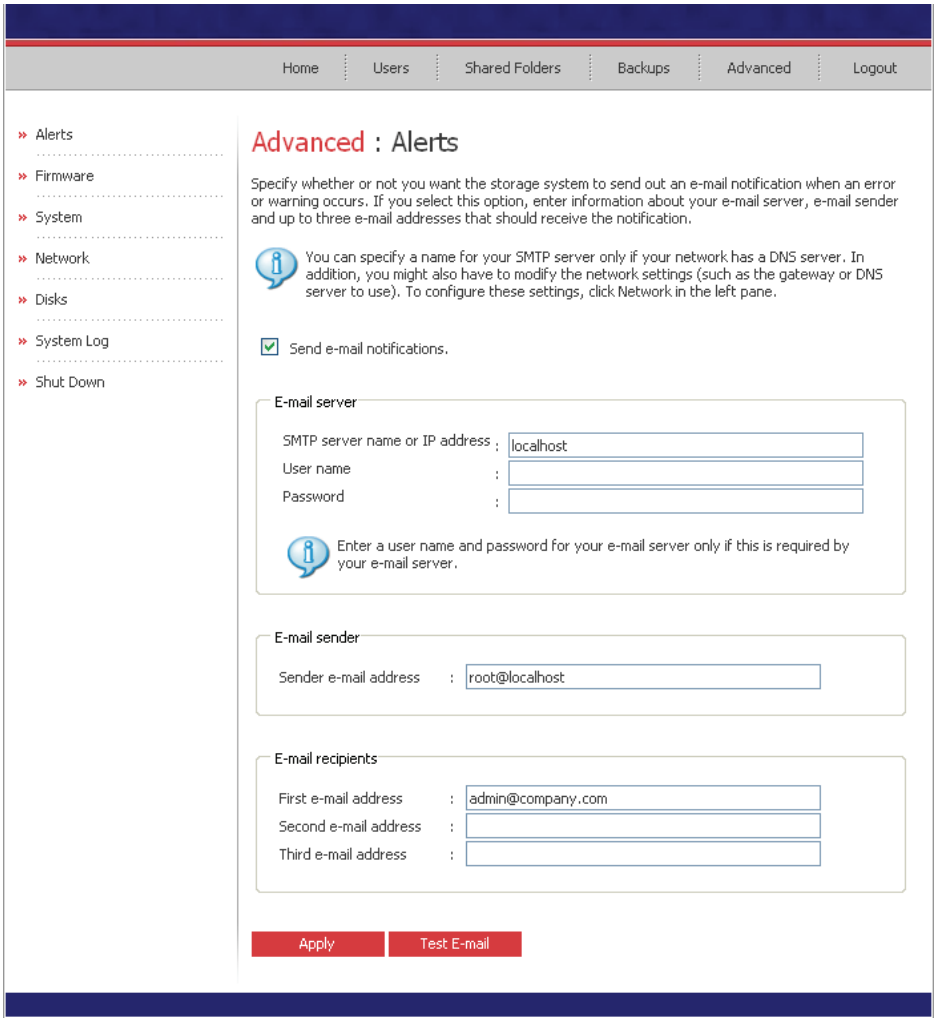
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
System Log
Shut Down
Advanced : Alerts
Specify whether or not you want the storage system to send out an e-mail notification when an error or warning occurs. If you select this option, enter information about your e-mail server, e-mail sender and up to three e-mail addresses that should receive the notification.
You can specify a name for your SMTP server only if your network has a DNS server. In addition, you might also have to modify the network settings (such as the gateway or DNS server to use). To configure these settings, click Network in the left pane.
Send e-mail notifications.
E-mail server
SMTP server name or IP address : localhost
User name :
Password :
Enter a user name and password for your e-mail server only if this is required by your e-mail server.
E-mail sender
Sender e-mail address : root@localhost
E-mail recipients
First e-mail address : admin@company.com
Second e-mail address :
Third e-mail address :
Apply
Test E-mail

2. Enter the information about your email server and up to three email addresses that should receive the notification.
3. Click on **Apply**.

Firmware

Displays the current version of the firmware that is installed on your storage system. It also allows you to upgrade it if a newer firmware become available.

1. Click on **Firmware** and the following screen appears. For additional security, you must enter your administration password in order to upgrade the firmware.

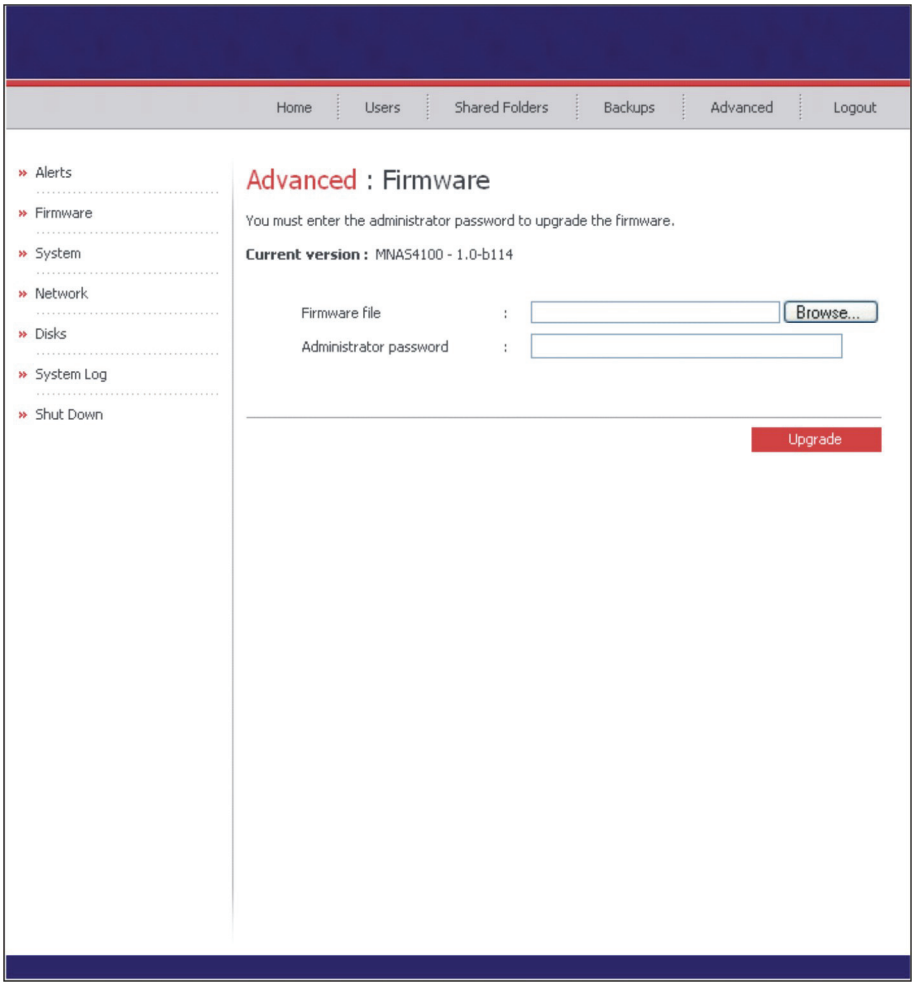

2. In the **Firmware file** text box, enter the path and filename for the firmware package (such as `D:\fs20060921.pkg`), or click **Browse** and select the file from the displayed list.
3. In the **Administrator password** text box, enter the password that you use for logging in to the **Storage System Console**.
4. Click on **Upgrade**.
5. When the confirmation message appears, click on **OK**.

System

Displays the settings that you specified when you initially configured the storage system, such as the storage system name, and the current date and time. You can also change the administrator name and password to use for logging in to the Storage System Manager.

1. Click on **System** and the following screen appears.

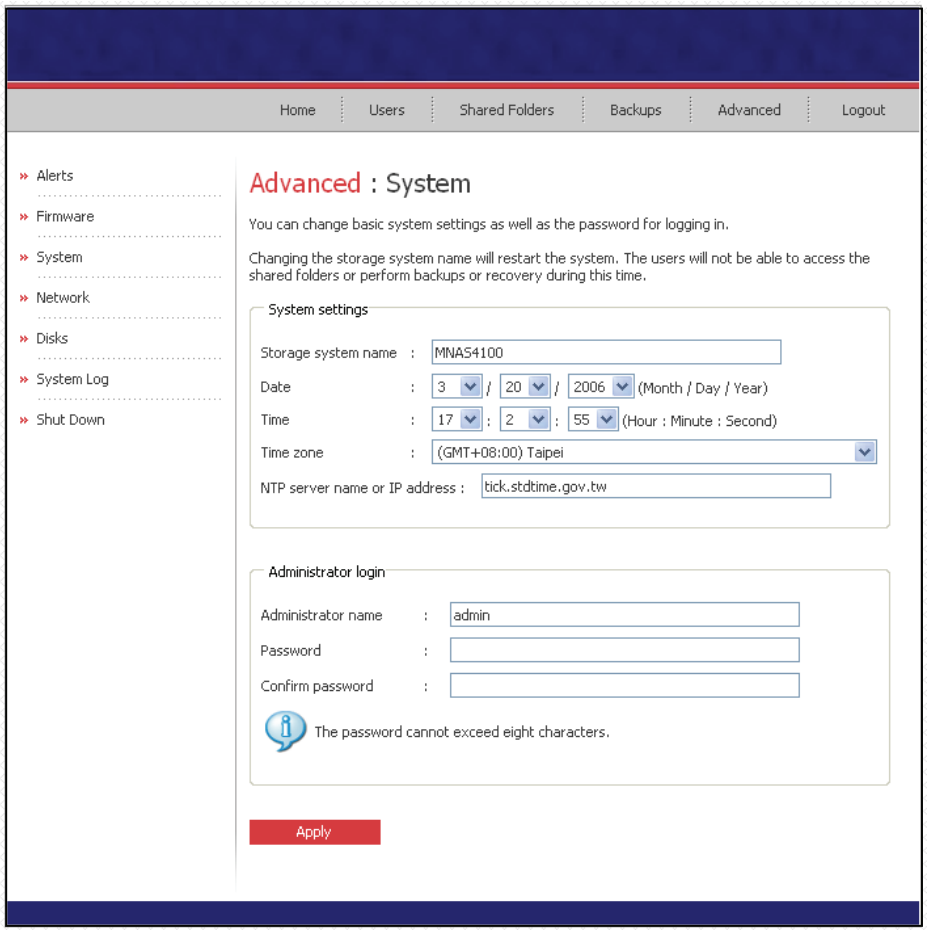
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
System Log
Shut Down
Advanced : System
You can change basic system settings as well as the password for logging in.
Changing the storage system name will restart the system. The users will not be able to access the shared folders or perform backups or recovery during this time.
System settings
Storage system name : MNAS4100
Date : 3 / 20 / 2006 (Month / Day / Year)
Time : 17 : 2 : 55 (Hour : Minute : Second)
Time zone : (GMT+08:00) Taipei
NTP server name or IP address : tick.stdtime.gov.tw
Administrator login
Administrator name : admin
Password :
Confirm password :
The password cannot exceed eight characters.
Apply

> **NOTE:** Changing the **Storage system name** might affect access to shared folders or backups, depending on how your network is configured and how users access the storage system

To change this . . .	Do this . . .
Storage system name	Enter the new name to use for the storage system. The name can be up to 15 characters long and can include letters, numbers, and hyphens.
Date, Time, Time zone	In the **Date** fields, enter or select the desired month, day, and year. In the **Time** fields, enter or select the desired hour, minute, and second. In the **Time zone** list, select the desired time zone.
NTP server name or IP address	Enter the name or IP address of the Network Time Protocol server from which the storage system should adjust its time. You can use a NTP server name only if it is resolvable.
Administrator name **Password** **Confirm password**	In the **Administrator name** field, enter the user name for logging in to the Storage System Manager. In the **Password** and **Confirm password** fields, enter the password for logging in to the Storage System Manager. The user name and password are case-sensitive.

2. After making the necessary changes, click on **Apply**.
3. When the confirmation message appears, click on **OK** for the changes to take effect.

Network

Displays the network settings that were set when you initially configured the storage system (only the first Ethernet port was configured during setup, the second uses its default settings unless you change them here).

1. Click on **Network** and the following screen appears.

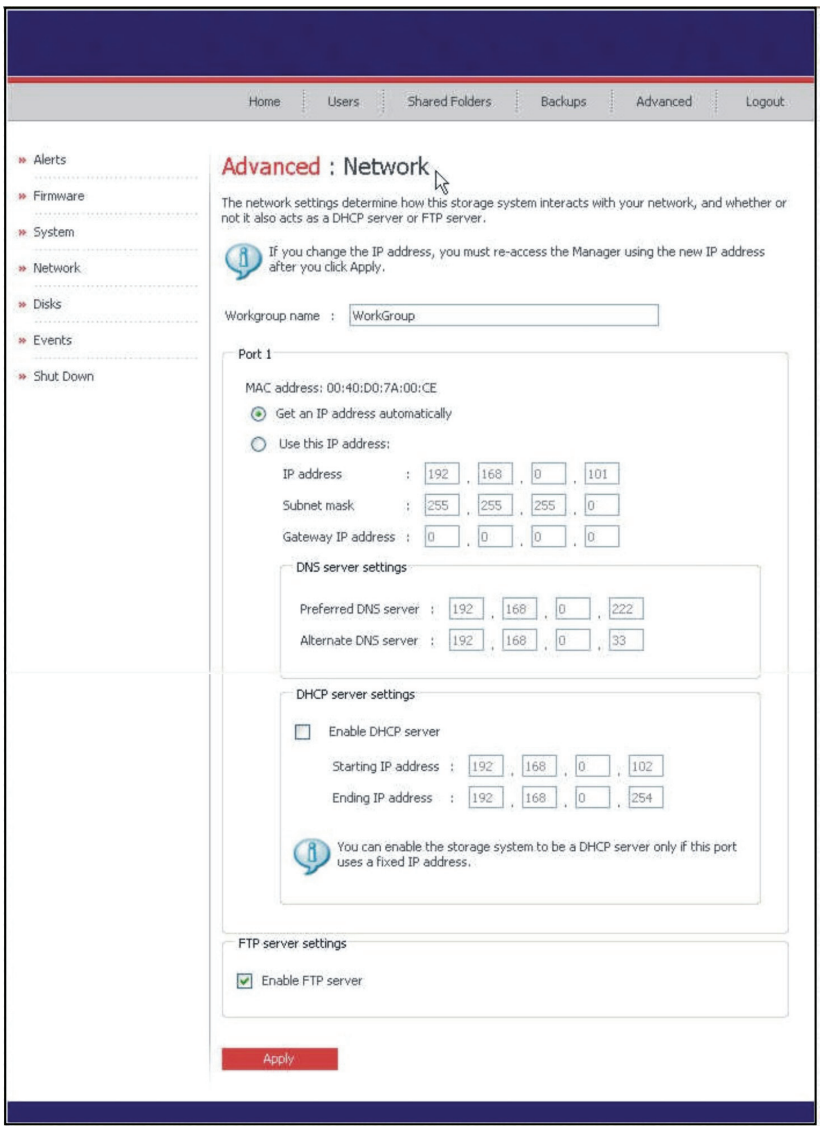
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
Events
Shut Down
Advanced : Network
The network settings determine how this storage system interacts with your network, and whether or not it also acts as a DHCP server or FTP server.
If you change the IP address, you must re-access the Manager using the new IP address after you click Apply.
Workgroup name : WorkGroup
Port 1
MAC address: 00:40:D0:7A:00:CE
Get an IP address automatically
Use this IP address:
IP address : 192 . 168 . 0 . 101
Subnet mask : 255 . 255 . 255 . 0
Gateway IP address : 0 . 0 . 0 . 0
DNS server settings
Preferred DNS server : 192 . 168 . 0 . 222
Alternate DNS server : 192 . 168 . 0 . 33
DHCP server settings
Enable DHCP server
Starting IP address : 192 . 168 . 0 . 102
Ending IP address : 192 . 168 . 0 . 254
You can enable the storage system to be a DHCP server only if this port uses a fixed IP address.
FTP server settings
Enable FTP server
Apply

2. Make the necessary changes and click on **Apply** for the settings to take effect.

Disks

Displays information about all the hard disks that are currently installed in your storage system.

1. Click on **Disks** and the following screen appears.

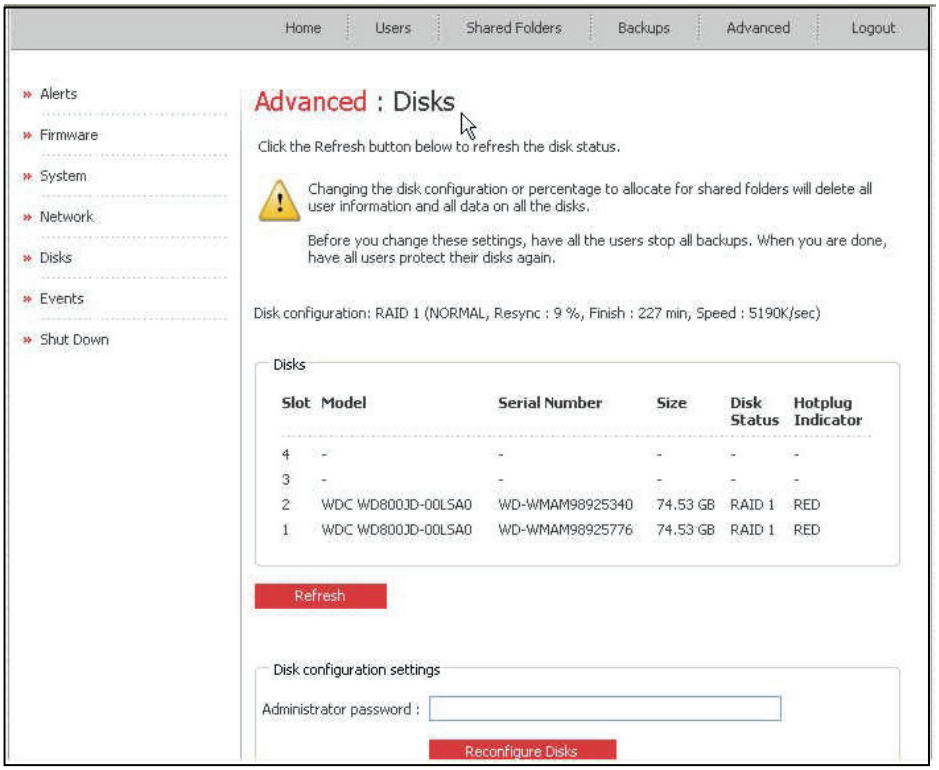
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
Events
Shut Down
Advanced : Disks
Click the Refresh button below to refresh the disk status.
Changing the disk configuration or percentage to allocate for shared folders will delete all user information and all data on all the disks.
Before you change these settings, have all the users stop all backups. When you are done, have all users protect their disks again.
Disk configuration: RAID 1 (NORMAL, Resync : 9 %, Finish : 227 min, Speed : 5190K/sec)
Disks
Slot Model Serial Number Size Disk Status Hotplug Indicator
4 - - - - -
3 - - - - -
2 WDC WD800JD-00LSA0 WD-WMAM98925340 74.53 GB RAID 1 RED
1 WDC WD800JD-00LSA0 WD-WMAM98925776 74.53 GB RAID 1 RED
Refresh
Disk configuration settings
Administrator password :
Reconfigure Disks

> **NOTE:** The color indicated on the **Hotplug Indicator** column is as follows:
> - **RED** – cannot hotswap hard drive, data will be loss.
> - **GREEN** – can hotswap hard drive.
> - **YELLOW** – can hotswap hard drive, but it will be downgraded.

2. In the **Administrator password** text box, enter your password for logging in to the **Storage System Console**.

3. Click on **Reconfigure Disks**.

4. When the confirmation message appears, click on **OK**. The **Disk Configuration** page appears (the options that appear on this page vary, depending on the number of hard disks that are currently installed in the system).

   If you have four disks installed, the following screen appears.

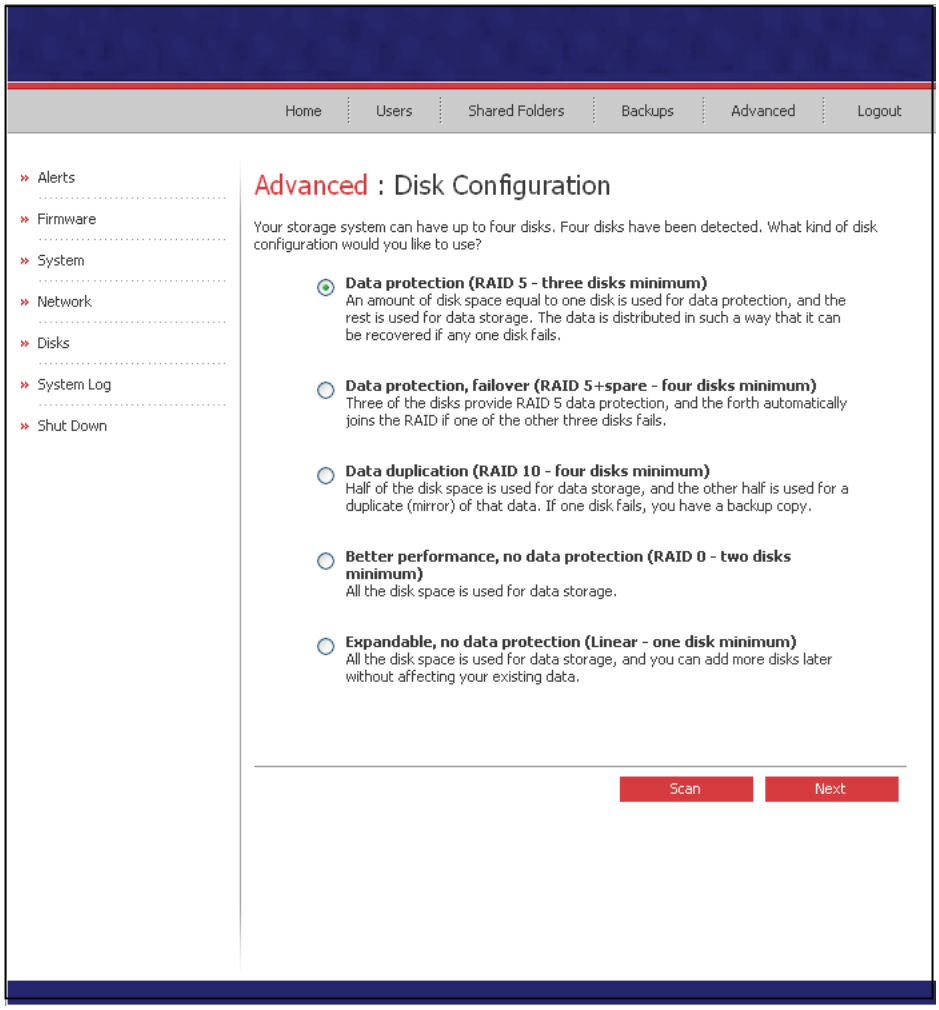
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
System Log
Shut Down
Advanced : Disk Configuration
Your storage system can have up to four disks. Four disks have been detected. What kind of disk configuration would you like to use?
Data protection (RAID 5 - three disks minimum)
An amount of disk space equal to one disk is used for data protection, and the rest is used for data storage. The data is distributed in such a way that it can be recovered if any one disk fails.
Data protection, failover (RAID 5+spare - four disks minimum)
Three of the disks provide RAID 5 data protection, and the forth automatically joins the RAID if one of the other three disks fails.
Data duplication (RAID 10 - four disks minimum)
Half of the disk space is used for data storage, and the other half is used for a duplicate (mirror) of that data. If one disk fails, you have a backup copy.
Better performance, no data protection (RAID 0 - two disks minimum)
All the disk space is used for data storage.
Expandable, no data protection (Linear - one disk minimum)
All the disk space is used for data storage, and you can add more disks later without affecting your existing data.
Scan
Next

If you have two disks installed, the following screen appears.

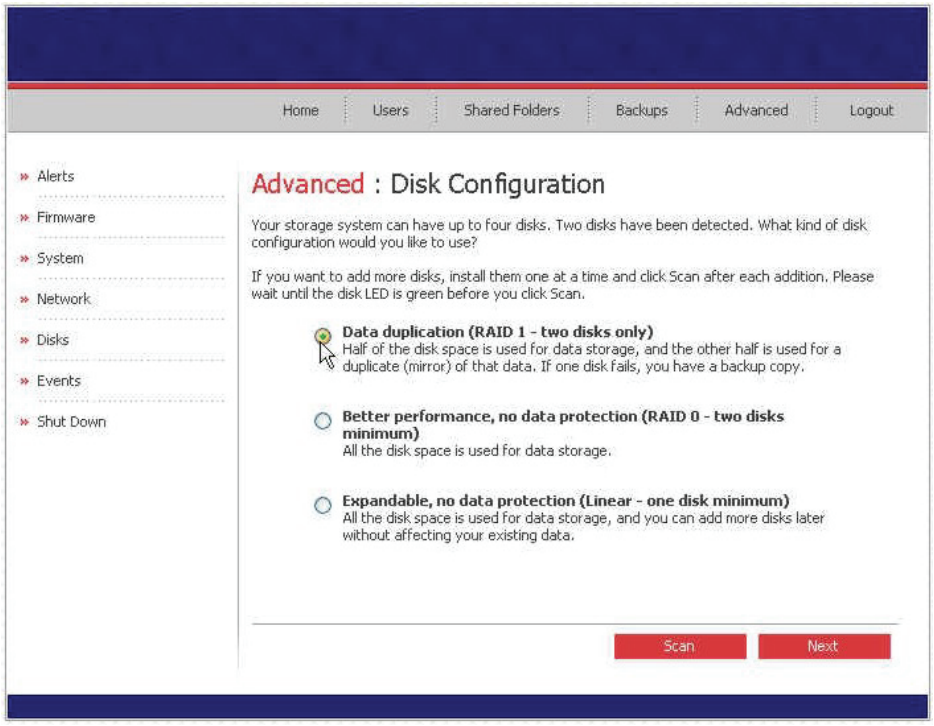
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
Events
Shut Down
Advanced : Disk Configuration
Your storage system can have up to four disks. Two disks have been detected. What kind of disk configuration would you like to use?
If you want to add more disks, install them one at a time and click Scan after each addition. Please wait until the disk LED is green before you click Scan.
Data duplication (RAID 1 - two disks only)
Half of the disk space is used for data storage, and the other half is used for a duplicate (mirror) of that data. If one disk fails, you have a backup copy.
Better performance, no data protection (RAID 0 - two disks minimum)
All the disk space is used for data storage.
Expandable, no data protection (Linear - one disk minimum)
All the disk space is used for data storage, and you can add more disks later without affecting your existing data.
Scan
Next

5. If you want to add or remove hard disks, do so one at a time and click on **Scan** after each action. If you are adding disks, wait until the disk LED is green before you click on **Scan**.

   To accept the default disk configuration (which will provide the best level of data protection available for the number of hard disks currently installed), click on **Next**.

   If you want to change the disk configuration, select the desired RAID level and then click on **Next**.

The **Disks to Back Up** page appears on screen.

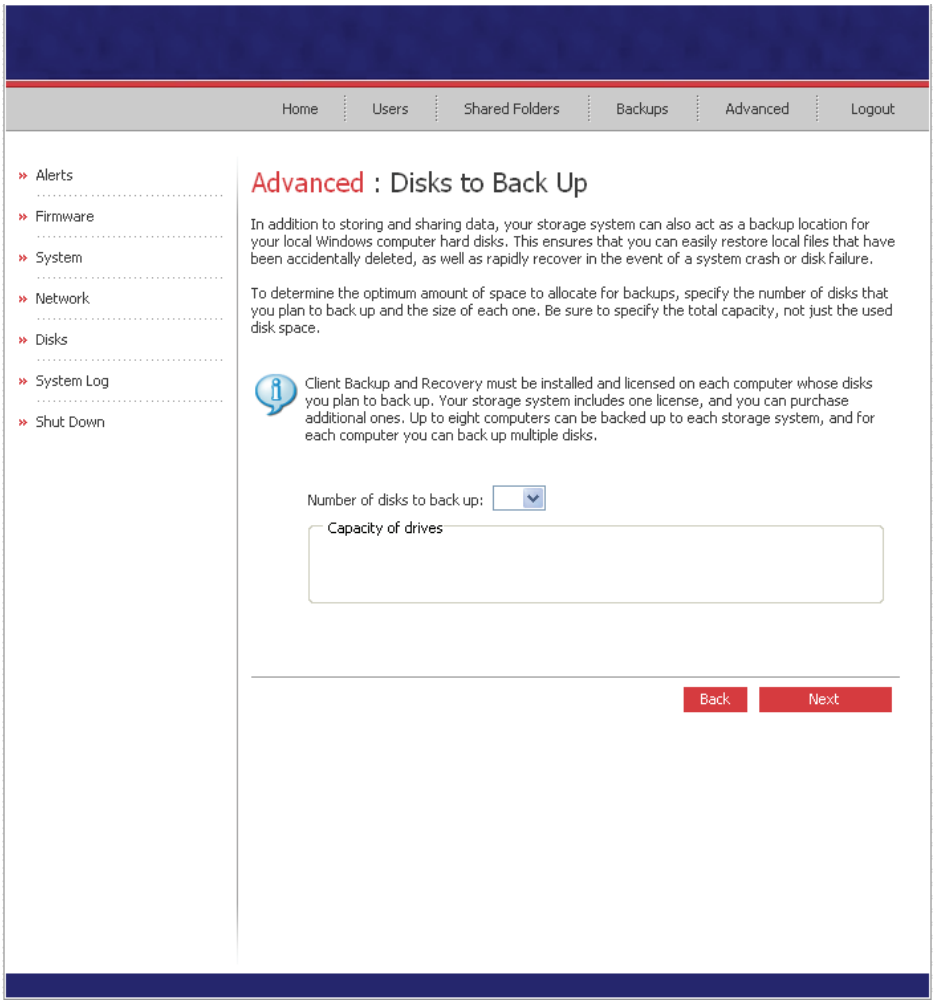
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
System Log
Shut Down
Advanced : Disks to Back Up
In addition to storing and sharing data, your storage system can also act as a backup location for your local Windows computer hard disks. This ensures that you can easily restore local files that have been accidentally deleted, as well as rapidly recover in the event of a system crash or disk failure.
To determine the optimum amount of space to allocate for backups, specify the number of disks that you plan to back up and the size of each one. Be sure to specify the total capacity, not just the used disk space.
Client Backup and Recovery must be installed and licensed on each computer whose disks you plan to back up. Your storage system includes one license, and you can purchase additional ones. Up to eight computers can be backed up to each storage system, and for each computer you can back up multiple disks.
Number of disks to back up:
Capacity of drives
Back
Next

6. In the **Number of disks to back up** list, select the total number of disks that you plan to back up to this storage system.

   If some computers have multiple disks, be sure to select the total number of disks that you plan to back up. For example, if your network has five computers and each computer has two hard disks, you would select **10**.

When you select a number from this list box, a corresponding number of text boxes (**Disk 1**, **Disk 2**, etc.) appear in the **Capacity of drives** group box.

> **IMPORTANT:** If your storage system does not contain the backup software, and you do not plan to add it in the future, select **0**, click on **Next**, and go directly to step 10.

7. In each text box, enter the size of each disk that you plan to back up (in gigabytes). The **Disk Space Distribution** page appears on screen.

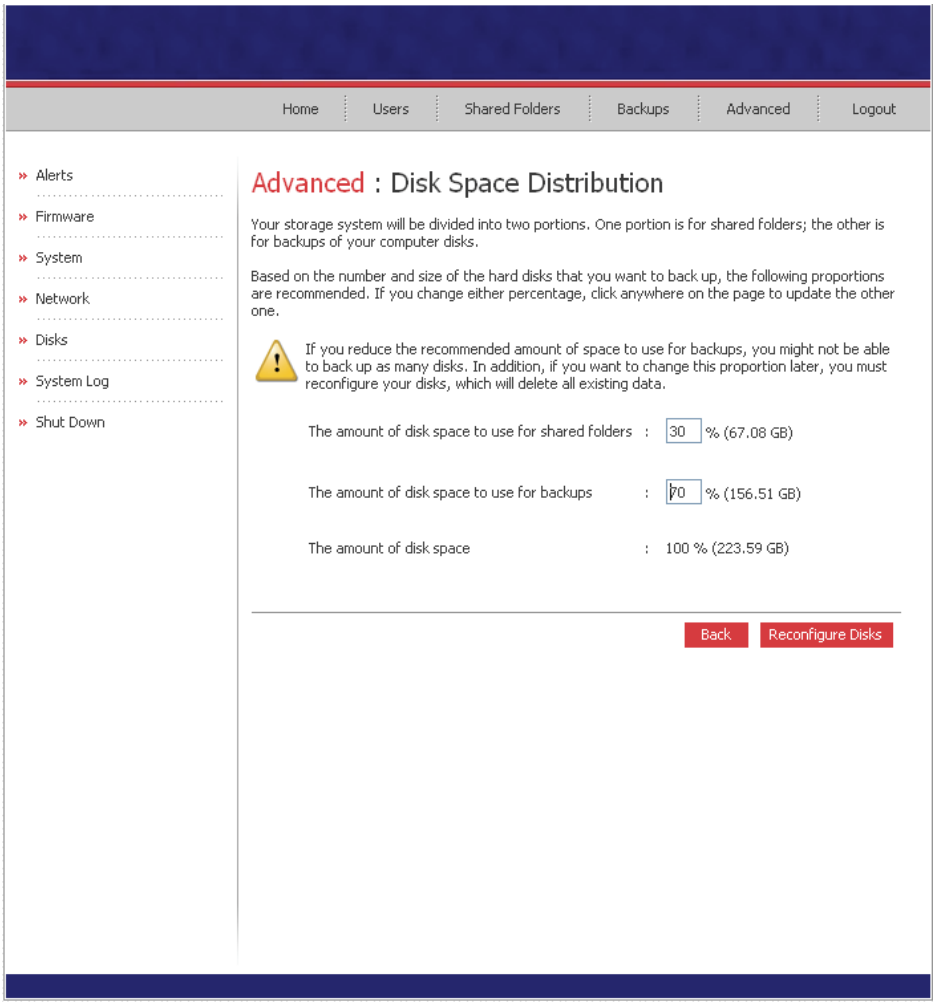
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
System Log
Shut Down
Advanced : Disk Space Distribution
Your storage system will be divided into two portions. One portion is for shared folders; the other is for backups of your computer disks.
Based on the number and size of the hard disks that you want to back up, the following proportions are recommended. If you change either percentage, click anywhere on the page to update the other one.
If you reduce the recommended amount of space to use for backups, you might not be able to back up as many disks. In addition, if you want to change this proportion later, you must reconfigure your disks, which will delete all existing data.
The amount of disk space to use for shared folders : 30 % (67.08 GB)
The amount of disk space to use for backups : 70 % (156.51 GB)
The amount of disk space : 100 % (223.59 GB)
Back
Reconfigure Disks

8. To change the percentage of space allocated for shared folders and backups, enter the desired percentage for each usage type (the percentages must add up to 100 %). Then click on **Reconfigure Disks**.

9. When the confirmation message appears, click on **OK**. The following screen appears showing the progress of the process.

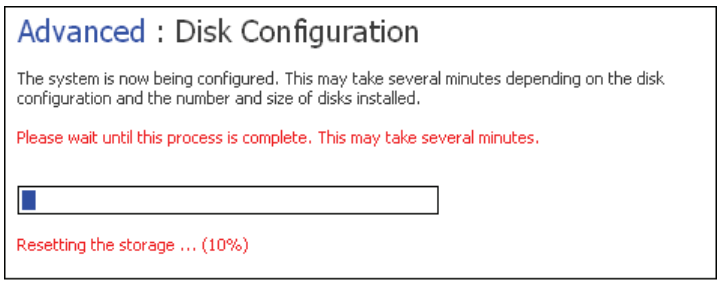
Advanced : Disk Configuration
The system is now being configured. This may take several minutes depending on the disk configuration and the number and size of disks installed.
Please wait until this process is complete. This may take several minutes.
Resetting the storage ... (10%)

When this process is complete, the storage system restarts.

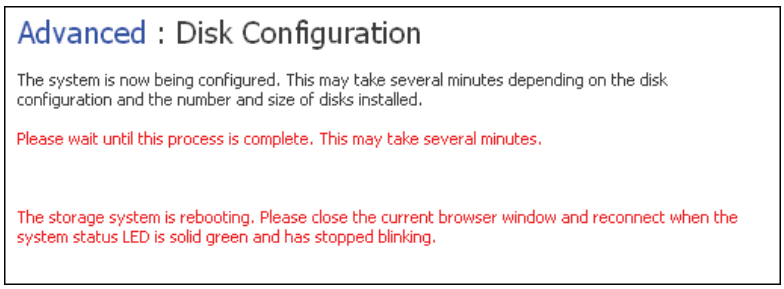
Advanced : Disk Configuration
The system is now being configured. This may take several minutes depending on the disk configuration and the number and size of disks installed.
Please wait until this process is complete. This may take several minutes.
The storage system is rebooting. Please close the current browser window and reconnect when the system status LED is solid green and has stopped blinking.

10. Close the **Storage System Console**.

After the system has restarted (when the system status LED is once again green), you can access the **Storage System Console** and re-create your users and shared folders (see previous sections).

System Log

Displays a list of events that have occurred on the storage system. Reviewing this list can help you identify and resolve any problems that you might encounter.

1. Click on **System Log** and the following screen appears. The date and time of the event, the type of event (**I** for informational, **E** for error, **W** for warning, and **C** for critical), and a brief description of the event are displayed.

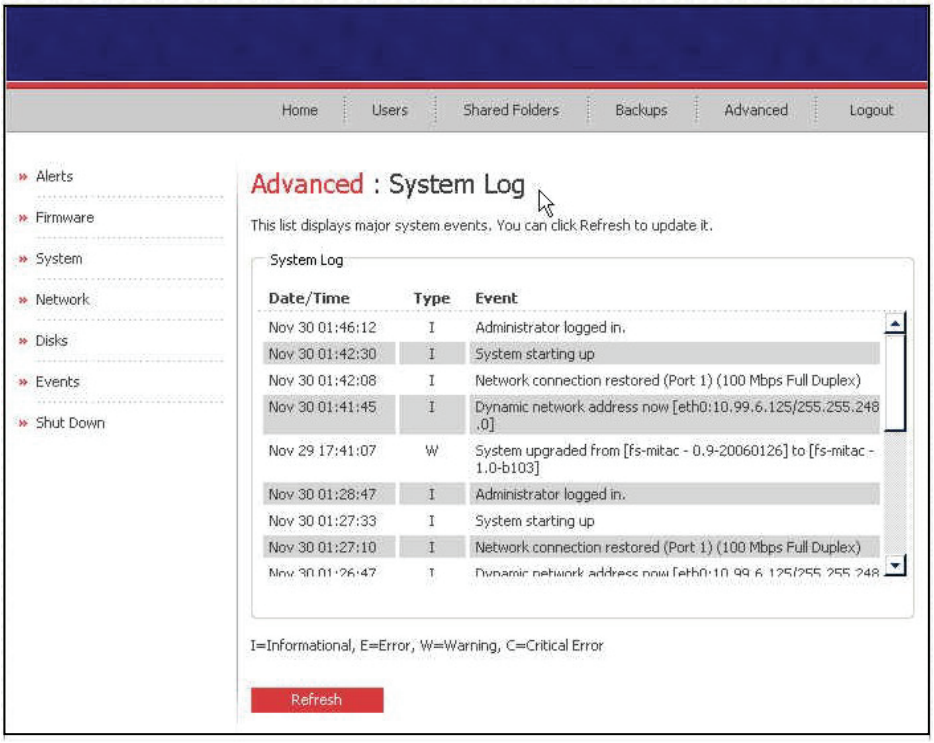
Home
Users
Shared Folders
Backups
Advanced
Logout
Alerts
Firmware
System
Network
Disks
Events
Shut Down
Advanced : System Log
This list displays major system events. You can click Refresh to update it.
System Log
Date/Time
Type
Event
Nov 30 01:46:12 I Administrator logged in.
Nov 30 01:42:30 I System starting up
Nov 30 01:42:08 I Network connection restored (Port 1) (100 Mbps Full Duplex)
Nov 30 01:41:45 I Dynamic network address now [eth0:10.99.6.125/255.255.248.0]
Nov 29 17:41:07 W System upgraded from [fs-mitac - 0.9-20060126] to [fs-mitac - 1.0-b103]
Nov 30 01:28:47 I Administrator logged in.
Nov 30 01:27:33 I System starting up
Nov 30 01:27:10 I Network connection restored (Port 1) (100 Mbps Full Duplex)
I=Informational, E=Error, W=Warning, C=Critical Error
Refresh

2. If an event occurs while you are viewing this list, click on **Refresh** to update it.

Shutdown

To shut down the storage system, you can press the power button on the unit itself and hold it until the system status and disk activity LEDs start flashing, or you can shut the storage system down using the Web Management. To use the Web Management:

1. Click on **Shutdown** and the following screen appears, allowing you to shutdown the storage system.

   > **CAUTION:** Make sure no one is backing up a disk or using a shared folder before you shut down the storage system.

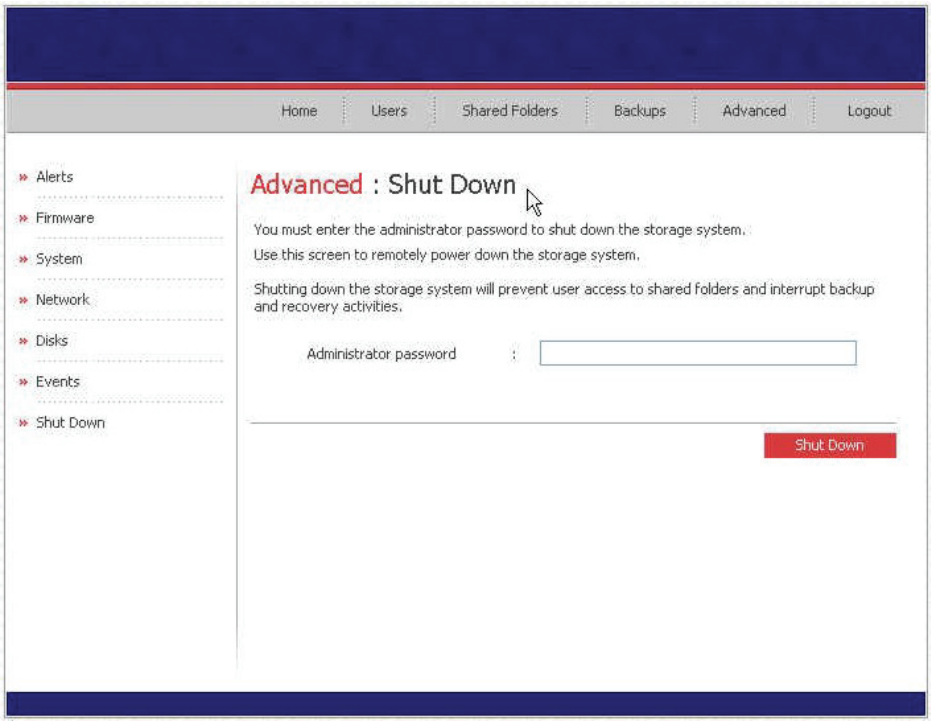

2. To ensure that you do not shut down the system accidentally, enter the **Administrator password**.

3. Click on **Shut Down**. A message appears indicating that the system is shutting down. Once the storage system shuts down, users will no longer be

able to access the shared folders or backup their disks. To start the storage system again, press the Power button.

> **CAUTION:** Always shutdown the system in accordance with the instructions above. An improper shutdown may affect the functionality of storage system in the next startup.

3.5 Logging Out of Web Management

1. To log out of the Web Management system, click on the **Logout** button on your homepage
2. When the confirmation message appears, click on **OK** and the following screen appears.

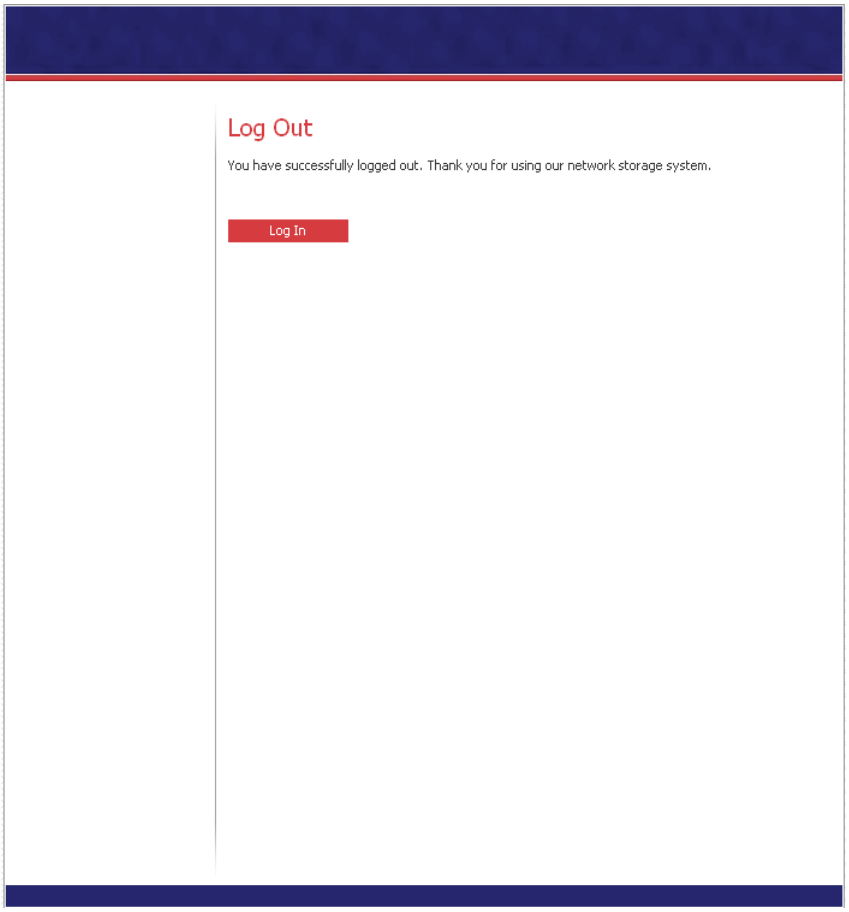

To use the Web Management later, click on **Log In**.

Chapter 4 Disk Configurations

Your storage system supports the following types of disk configurations:

- **Linear**—A linear configuration is similar to using multiple hard disks in a regular computer. Each disk is an independent entity, and the data on it is self-contained. You can add or remove the disks without affecting the other disks. All the available disk space is used for data.

  If your storage system has only one disk, you must use a linear configuration. However, you can use a linear configuration for two, three, or four disks as well.

Linear

- **RAID 0**—Instead of writing all the data to one disk in a linear fashion, some bytes are written to one disk, and other bytes are written to another. Performance is faster because reading and writing activities can occur on multiple disks simultaneously. All the available disk space is used for data.

  For RAID 0, your storage system must have at least two disks. However, you can use RAID 0 with three or four disks as well, and the disks can be any size.

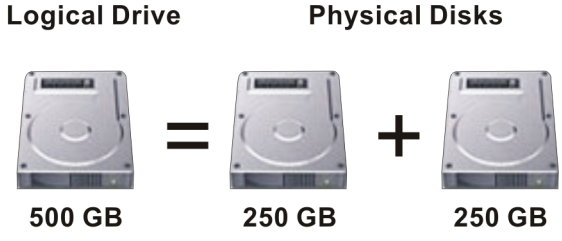

RAID 0 : Striping

- **RAID 1**—In this configuration, all the data written to one disk is duplicated on the other disk. This offers greater data protection since if one disk fails, all your data is still intact on the other disk. However, using RAID 1 means only half your available disk space is used for data; the other half is used for a duplicate (mirror) of that data.

  You can use RAID 1 only if your storage system has only two disks. If the disks are not the same size, the smaller of the two disks is used for data, and the larger of the two disks is used as the mirror. If one disk fails, the other disk continues to make its data available.

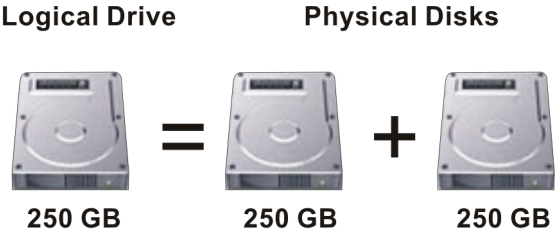

RAID 1 : Mirroring

- **RAID 10**—RAID 10 is similar to RAID 1, but rather than having one disk mirror to one other disk, two disks mirror to the two other disks.

  You can use RAID 10 only if your storage system has four disks. The disks in the first two slots constitute the first pair, and the disks in the second two slots constitute the second pair. In each pair, the smaller of the two disks is used for data, and the larger of the two disks is used as the mirror. If one disk in the pair fails, the other disk continues to make its data available.

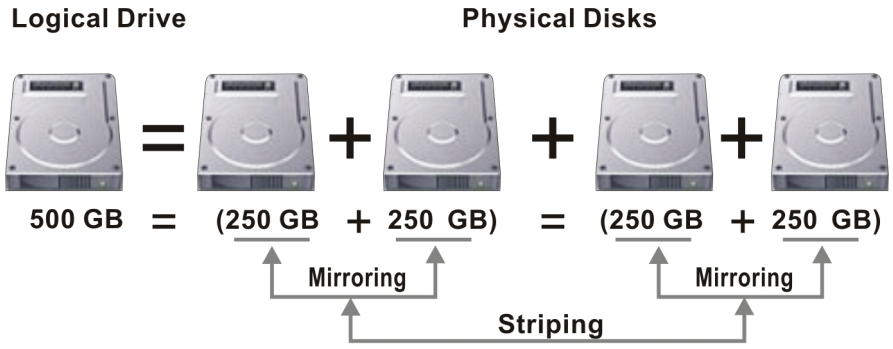

RAID 10（Mirroring + Striping）

- **RAID 5**—Like RAID 0, RAID 5 offers increased performance by distributing the data across multiple disks. But unlike RAID 0, RAID 5 also offers data protection. If your storage system has three disks of equal size, two thirds of each disk are used for data, and the remaining third contains the parity information needed to reconstruct either of the other two. In this way, if any of the three disks fails, it can be reconstructed when a new disk is installed in the storage system.

  If your storage system has four disks of equal size, three fourths of each disk are used for data, and the remaining fourth contains the parity information needed to reconstruct either of the other three. If any of the four disks fails, it can be reconstructed when a new disk is installed.

RAID 5: Striping + Rotating Parity

- **RAID 5 + spare**—In this configuration, three of the disks use RAID 5, and the fourth is empty. If any of the three disks fails, it is immediately rebuilt using the fourth spare disk. As a result, you can remove the failed disk and still have the ongoing fast performance and data protection offered by RAID 5. When the failed disk is repaired or replaced and re-installed into the storage system, it automatically becomes the spare for the other functioning three.

  You can use RAID 5 + spare only if your storage system has four disks. If the disks are not the same size, the smallest of the disks determines how much disk space is available for data, similar to RAID 5.

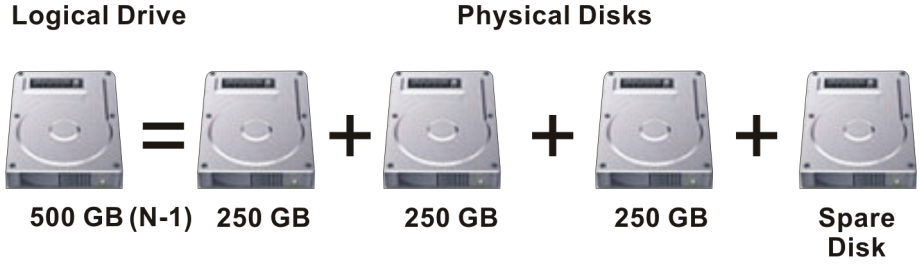

RAID 5+spare : Striping + Rotating Parity + one spare disk

4.1 Adding hard disks

The effect of adding hard disks to your storage system varies, depending on the disk configuration you chose when you configured the system and the current state of the existing disks.

For example, in a linear configuration, you can add a new disk at any time, and data can be written to that disk as soon as it is added. Whether you previously removed a disk or one of the other disks failed makes no difference.

In a RAID configuration, the effect of adding a disk varies, depending on whether the RAID is in a normal or degraded state (as indicated on the **Disks** page of your **Storage System Console**). A normal state indicates that the RAID is functioning properly. A degraded state indicates that one or more disks have been removed or failed, but because of the data protection offered by the RAID, you can continue to access all the data.

In a normal state, you cannot add a disk to a RAID 0 or RAID 1 configuration. Any disk that you install will not be used unless you subsequently reconfigure the storage system.

> **CAUTION:** Reconfiguring your storage system disks deletes all the data on your storage system.

However, if you currently have three disks and a RAID 5 configuration, you can add a fourth disk as a spare (essentially changing from RAID 5 to RAID 5 + spare while retaining all your existing data).

In a degraded state, you can add a disk to a RAID at any time, and the new disk will be rebuilt to replace the disk that was removed or failed.

> **CAUTION:** If the RAID has failed – that is, if so many disks have failed or been removed that the RAID can no longer function – you must either re-install the disks or reconfigure the entire storage system, deleting all the data on your system.

Adding Hard Disks to a Linear or Normal RAID Configuration

To add a hard disk to a linear or normal RAID configuration:

1. Insert the hard disk into the storage system. You can do this whether the storage system is powered on or off.

2. Access the **Storage System Console** or refresh the browser window. The **Disk Change Notification** page appears.

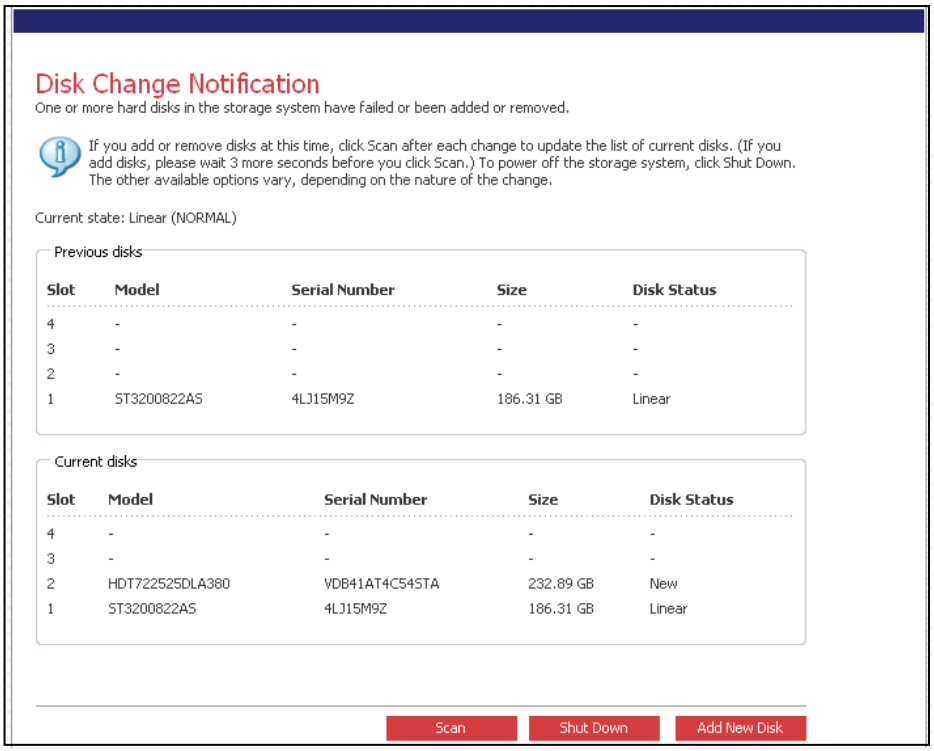
Disk Change Notification
One or more hard disks in the storage system have failed or been added or removed.
If you add or remove disks at this time, click Scan after each change to update the list of current disks. (If you add disks, please wait 3 more seconds before you click Scan.) To power off the storage system, click Shut Down. The other available options vary, depending on the nature of the change.
Current state: Linear (NORMAL)
Previous disks
Slot Model Serial Number Size Disk Status
4 - - - -
3 - - - -
2 - - - -
1 ST3200822AS 4LJ15M9Z 186.31 GB Linear
Current disks
Slot Model Serial Number Size Disk Status
4 - - - -
3 - - - -
2 HDT722525DLA380 VDB41AT4C545TA 232.89 GB New
1 ST3200822AS 4LJ15M9Z 186.31 GB Linear
Scan
Shut Down
Add New Disk

3. To add the disk to the storage system, click on **Add New Disk**.

   If the information on this page is not correct, click on **Scan** to scan the storage system again and update the page.

   You can also click on **Shut Down** to shut down the storage system, but you will be presented with this page again the next time you access the **Storage System Console**.

When you click on **Add New Disk**, the following page appears.

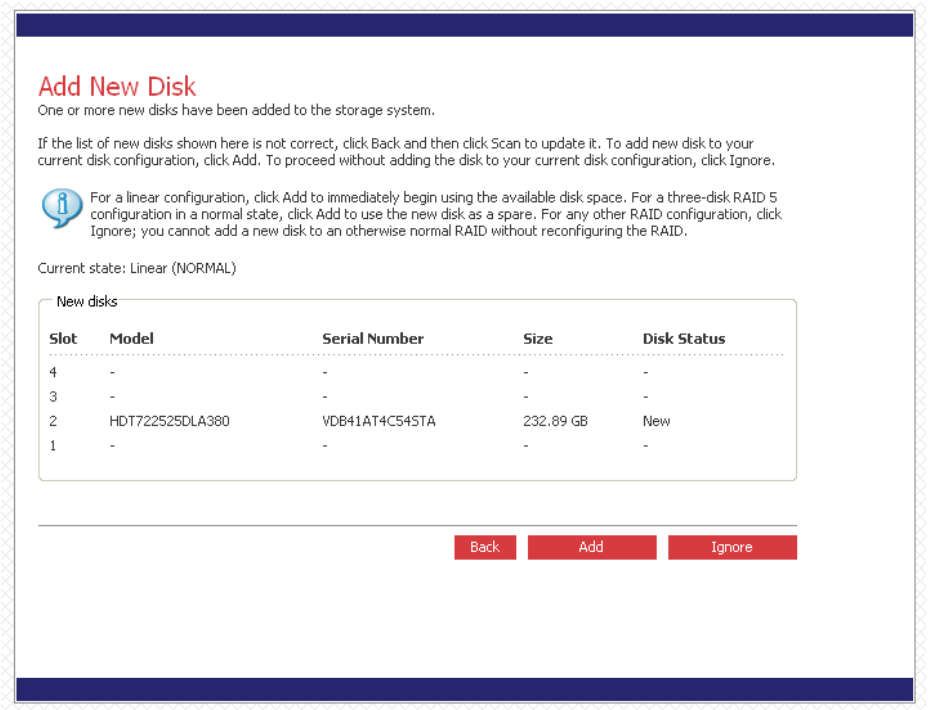
Add New Disk
One or more new disks have been added to the storage system.
If the list of new disks shown here is not correct, click Back and then click Scan to update it. To add new disk to your current disk configuration, click Add. To proceed without adding the disk to your current disk configuration, click Ignore.
For a linear configuration, click Add to immediately begin using the available disk space. For a three-disk RAID 5 configuration in a normal state, click Add to use the new disk as a spare. For any other RAID configuration, click Ignore; you cannot add a new disk to an otherwise normal RAID without reconfiguring the RAID.
Current state: Linear (NORMAL)
New disks
Slot Model Serial Number Size Disk Status
4 - - - -
3 - - - -
2 HDT722525DLA380 VDB41AT4C545TA 232.89 GB New
1 - - - -
Back
Add
Ignore

4. To add the disk to a linear configuration or use it as a spare for a normal three-disk RAID 5 configuration, click on **Add**. The **Disks** page indicates the current state of the disk configuration.

   To add the disk to the storage system but not add it to the RAID at this time, click on **Ignore**. The **Disks** page lists the disk that is part of the storage system, but its status is **New**, indicating that it is not being used. If you subsequently reconfigure the disks, you will be able to use this new disk.

   To return to the previous page (for example, to re-scan the storage system), click on **Back**.

Adding Hard Disks to a Degraded RAID Configuration

To add a hard disk to a degraded RAID configuration:

1. Insert the hard disk into the storage system. You can do this whether the storage system is powered on or off.
2. Access the **Storage System Console** or refresh the browser window. The **Disk Change Notification** page appears.

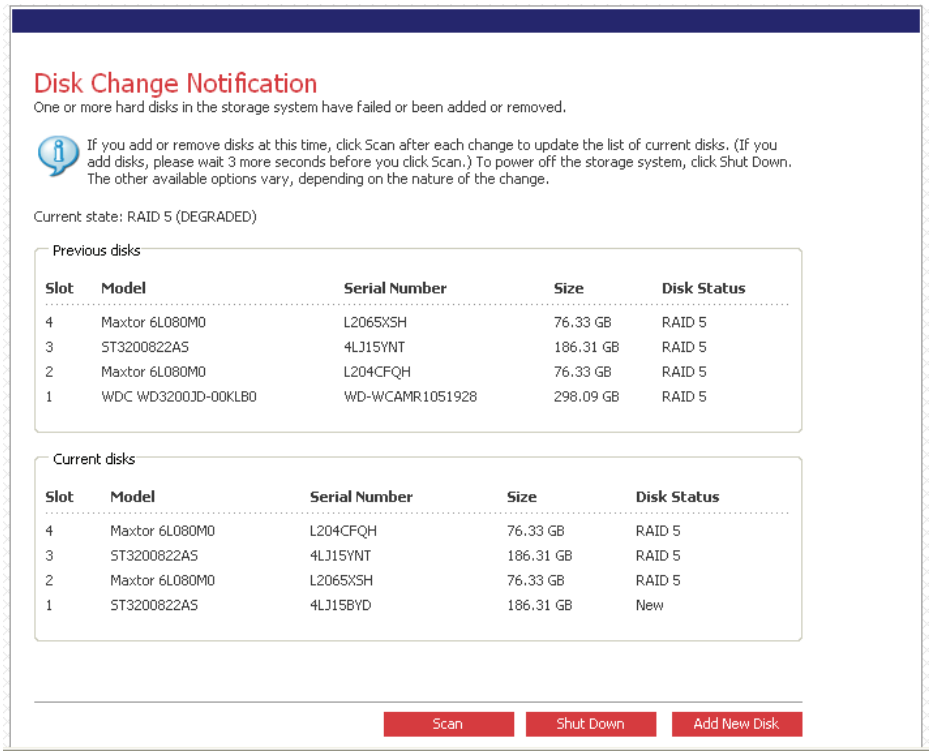
Disk Change Notification
One or more hard disks in the storage system have failed or been added or removed.
If you add or remove disks at this time, click Scan after each change to update the list of current disks. (If you add disks, please wait 3 more seconds before you click Scan.) To power off the storage system, click Shut Down. The other available options vary, depending on the nature of the change.
Current state: RAID 5 (DEGRADED)
Previous disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L2065XSH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
1 WDC WD3200JD-00KLB0 WD-WCAMR1051928 298.09 GB RAID 5
Current disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 Maxtor 6L080M0 L2065XSH 76.33 GB RAID 5
1 ST3200822AS 4LJ15BYD 186.31 GB New
Scan
Shut Down
Add New Disk

3. Click on **Add New Disk** to add the disk to the storage system.

The **Disks** page shows the progress of the rebuilding progress.

Alternatively, if the information on this page is not correct, click on **Scan** to scan the storage system again and update the page.

You can also click on **Shut Down** to shut down the storage system. When you restart the storage system, this page re-appears.

Removing Hard Disks or Responding to Disk Failure

The effect of removing hard disks from your storage system or disk failure varies, depending on the disk configuration you chose when you configured the system and the current state of the existing disks.

For example, in a linear configuration, when you remove a disk or a disk fails, the data associated with that disk is no longer available, but the data on all the other disks remains available.

In a RAID configuration, the effect of disk removal/failure varies, depending on the RAID level and whether the RAID is in a normal or degraded state. You can determine the effect of disk removal/failure by looking at the **Hotplug Indicator** on the **Disks** page. If this indicator is **GREEN**, disk removal/failure will have no effect on the RAID. If this indicator is **YELLOW**, disk removal/failure will cause RAID degradation, but you will still be able to access all the data. If the indicator is **RED**, disk removal/failure will cause the entire RAID to fail.

For example, in a RAID 5 configuration, all the disks are **YELLOW**. Removing any one of them will cause the RAID to be degraded, but all the data will still be available. However, after you remove one disk, all the other disks become **RED**, since removing any one of them at this point will cause the entire RAID to fail.

> **NOTE:** In a linear configuration, the **Hotplug Indicator** is **RED** for all the disks because removing any one of them will remove data from the storage system. However, this will not adversely affect any of the other disks.

In addition, while a disk is being rebuilt, all the other disks are **RED**, since removing any one of them at this point will cause the RAID to fail.

If you remove a viable disk and cause only RAID degradation, you can re-install the same disk and resume normal operation. (For information about adding a disk, refer to “Adding Hard Disks” on the previous section.)

> **NOTE:** If you remove two or more disks, you must re-install them in the reverse order to help maintain data integrity. For example, if you remove disk A from slot 1 and then remove disk B from slot 2, you must re-install disk B first, then disk A. You can put the disks back into different slots, but they must be re-installed in the opposite order from which they were removed.

If you remove one or more viable disks and cause the entire RAID to fail, you can shut down the storage system, re-install the same disks, and then restart the storage system. As long as you re-install the original disks, the storage system should be able to resume proper operation, although the integrity of the data cannot be guaranteed. However, if you replace the removed disks with new disks, you must reconfigure your disks.

> **CAUTION:** Reconfiguring your disks will delete all the data on your storage system.

Responding to RAID Degradation

When disk removal/failure causes RAID degradation, the **Disk Change Notification** page appears when you access the **Storage System Console** or refresh the browser window.

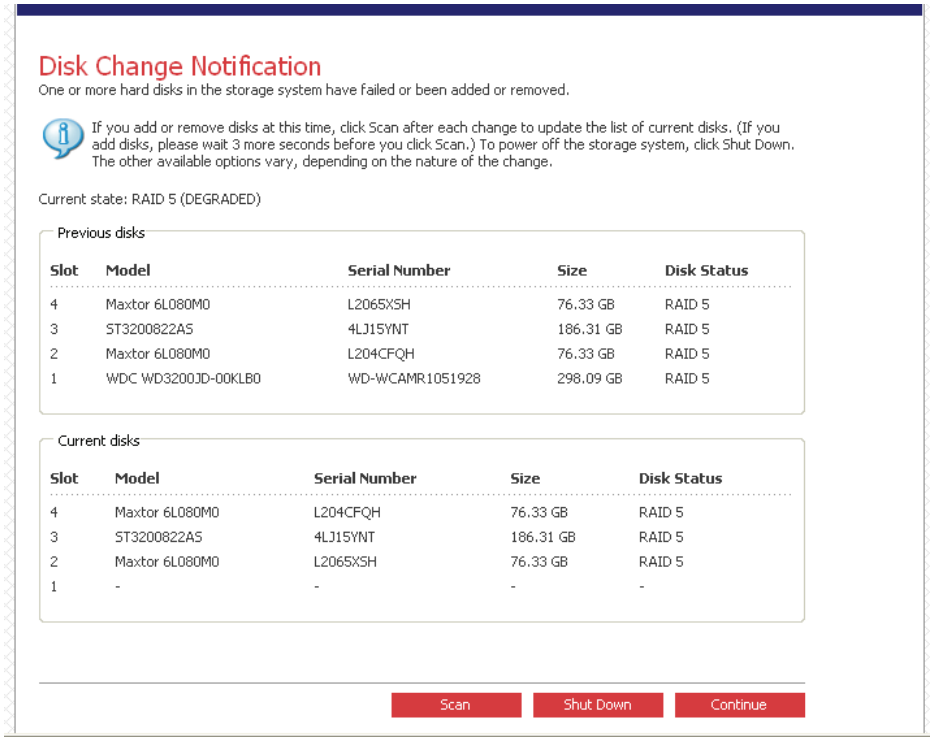
Disk Change Notification
One or more hard disks in the storage system have failed or been added or removed.
If you add or remove disks at this time, click Scan after each change to update the list of current disks. (If you add disks, please wait 3 more seconds before you click Scan.) To power off the storage system, click Shut Down. The other available options vary, depending on the nature of the change.
Current state: RAID 5 (DEGRADED)
Previous disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L2065XSH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
1 WDC WD3200JD-00KLB0 WD-WCAMR1051928 298.09 GB RAID 5
Current disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 Maxtor 6L080M0 L2065XSH 76.33 GB RAID 5
1 - - - -
Scan
Shut Down
Continue

To scan the storage system again and update the information on the page, click on **Scan**.

To re-install the same disk or install a new disk, click on **Shut Down**. After the storage system shuts down, install the disk and then restart the system.

> **NOTE:** If you are re-installing multiple disks, be sure to re-install them in the opposite order that you removed them.

To return to the **Storage System Console** and continue to operate in a degraded mode, click on **Continue**.

Responding to RAID Failure

When disk removal/failure causes the entire RAID to fail, the **Disk Change Notification** page appears when you access the **Storage System Console** or refresh the browser window.

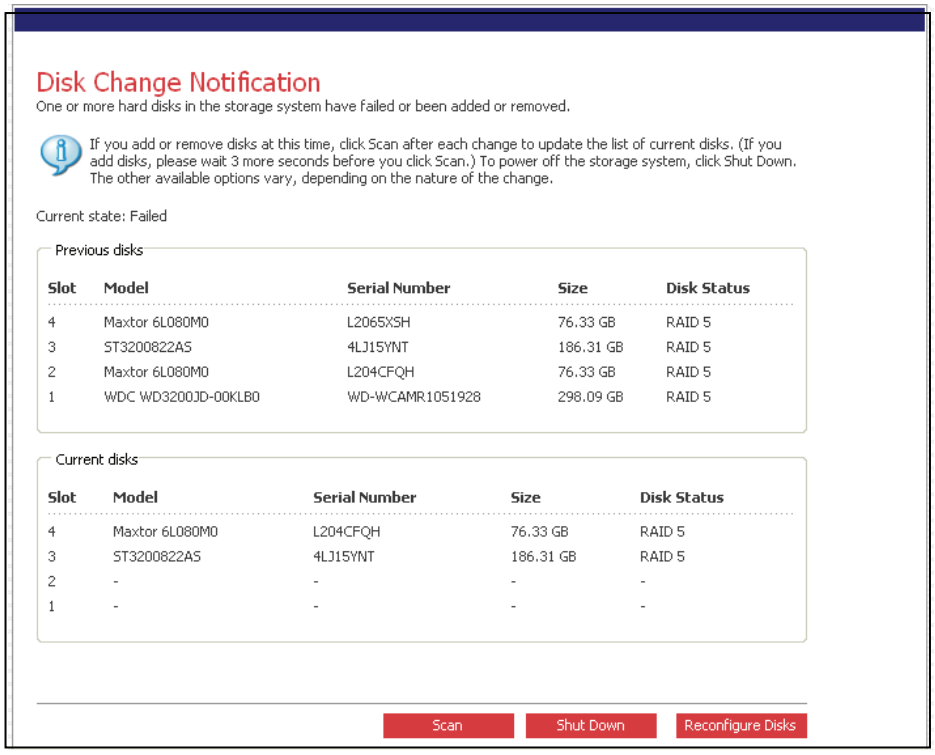
Disk Change Notification
One or more hard disks in the storage system have failed or been added or removed.
If you add or remove disks at this time, click Scan after each change to update the list of current disks. (If you add disks, please wait 3 more seconds before you click Scan.) To power off the storage system, click Shut Down. The other available options vary, depending on the nature of the change.
Current state: Failed
Previous disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L2065XSH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
1 WDC WD3200JD-00KLB0 WD-WCAMR1051928 298.09 GB RAID 5
Current disks
Slot Model Serial Number Size Disk Status
4 Maxtor 6L080M0 L204CFQH 76.33 GB RAID 5
3 ST3200822AS 4LJ15YNT 186.31 GB RAID 5
2 - - - -
1 - - - -
Scan
Shut Down
Reconfigure Disks

To scan the storage system again and update the information on the page, click on **Scan**.

To re-install the same disk, click on **Shut Down**. After the storage system shuts down, re-install the same disk and then restart the system.

> **NOTE:** If you removed multiple disks, be sure to re-install them in the opposite order that you removed them.

To reconfigure the storage system using the available disks, click on **Reconfigure Disks** and complete the system setup pages.

> **CAUTION:** Reconfiguring the storage system deletes all user information and all data on all the disks.

Swapping Hard Disks

If you are using RAID 5 + spare or RAID 10, you can move the hard disks from one slot to another whether or not the storage system is running. However, if you do this when the storage system is running, you can swap only two disks, and you must restart the system after you swap the disks. If you swap the disks when the storage system is not running, you can swap all four disks, and the system will function as it previously did when you restart it.

> **NOTE:** For RAID 5 + spare, if you swap the disks when the storage system is running, one of the swapped disks must be the spare.
> For RAID 10, the swapped disks must be in different pairs. For example, you can swap disks 1 and 3 or disks 2 and 4, but not disks 1 and 2, as those are members of the same pair.

If the storage system is running when you swap the disks, the **Disk Change Notification** page appears (as shown in the preceding section). Click on **Shut Down** and then restart the system.

For all other disk configurations (linear, RAID 0, RAID 1, and RAID 5), you can swap the hard disks only when the storage system is powered off, and you can swap all four disks.

Transferring Hard Disks to a New Storage System

If your storage system unit fails but the hard disks themselves are viable, you can transfer your existing hard disks to a new storage system, thereby preserving all your existing data.

To transfer hard disks to a new storage system:

1. Shut down both the old unit and the new unit.

> **CAUTION:** If you do not shut down the new unit before you insert the hard disks, you will be prompted to re-initialize the disks. If you do this, all the data on your hard disks will be lost.

2. Transfer the hard disks to the new unit.
3. Connect the new unit to your network and power on the new unit.
4. Access the **Storage System Console** for the new unit.

   As long as the new unit is in the same subnet as the old unit, you can access the **Storage System Console** using the same procedure you used previously. However, if the new unit is in a different subnet, you might have to install the Console on a computer in the same subnet as the storage system and use the Console to access it.

5. If the firmware in the flash memory of the new unit differs from the firmware on the hard disks, a message appears, prompting you to update the flash memory on the storage system with the firmware from the hard disks. Click on **Update** to proceed. If you do not want to upgrade the firmware at this time, click on **Shut Down** to shut down the system.

   > **NOTE:** If the firmware on your new unit is newer than the firmware on your hard disks, you might want to contact your vendor about obtaining the latest firmware. Refer to "Firmware" on the previous section for information about upgrading to newer firmware.

   If no message appears, you can manage the unit as you did before.